Paul Neuhaus

Removal instruction 836653

Instructions on how light sources and separate control gears can be removed without being permanently damaged for verification purposes by market surveillance authorities:

An Instruction on how to remove the light source from a containing product is provided for reference:



The removal may only be carried out by a professional.

Step 1: Lossen the cover.





Step 2: Remove the screws from the connection and remove the wire.





Step 3: Remove the screws from the driver.



Step 4: Cut off the latch from the lens on the back of the ceiling base.



Step 5: Remove the lens and the LED-Board.



Step 6: An individual light source is removed out of the containing product.



Step 7: Fix a new connection wire to the light source by using electric iron. Take care of the LEDs during this step, do not touch them.

Step 8: Provide the rated current to the light source and operate the ErP testing.