



BEDIENUNGS ANLEITUNG



USER MANUAL



 **MONOLITH**



#monolithbbq

Lass dich inspirieren!
Folge und verlinke uns auf:

Get inspired!
Follow and tag us on:



Monolith Grill



monolithbbq



Monolith Grill



join the club!

Tritt jetzt unserer exklusiven
Facebook Gruppe „Monolith
Owners Club“ bei. Von und
für Griller. Wir freuen uns
auf dich!

Join our grill community on
Facebook and Instagram!
'Monolith Owner's Club'



HERZLICHEN GLÜCKWUNSCH!

... zum Kauf eines Gerätes von der Monolith Grill GmbH und das uns damit entgegenbrachte Vertrauen. Wir wünschen Ihnen viel Vergnügen und jederzeit „gut Glut“!

Lesen und verstehen Sie diese Anleitung bevor Sie mit der Montage und / oder dem Grillen beginnen.

ACHTUNG!

In diesem Handbuch befinden sich **wichtige Informationen** zur richtigen Benutzung des Anzünders sowie der sicheren Handhabe. **Bevor Sie den Anzünder benutzen** ist es wichtig, sämtliche Anleitungen und Warnhinweise zu lesen und diesen Folge zu leisten. Bewahren Sie dieses Handbuch zum späteren Nachschlagen weiterhin auf.

Einen Garantieanspruch gewähren wir nur dann, wenn diese Bedienungsanleitung komplett gelesen und der Rechnung beigelegt wird.



Neugierig geworden?

Entdecken Sie jetzt das gesamte Zubehör-Sortiment und die verschiedenen Möglichkeiten der Nutzung; besuchen Sie unsere Internetseite

www.monolith-grill.eu
www.monolith-icon.com

oder unseren Youtube-Kanal
Monolith Grill:



WICHTIG!

Lesen Sie dieses Benutzerhandbuch vor der Verwendung des Geräts aufmerksam durch, um eine sichere und sachgemäße Verwendung zu gewährleisten.

WARNUNG!

Es ist wichtig, das Benutzerhandbuch zu lesen, um die Anwendungen, Einschränkungen und möglichen Gefahren zu verstehen, die mit diesem Gerät verbunden sind. Dieses Gerät ist nicht für die Verwendung von Personen (einschließlich Kindern) mit eingeschränkten physischen, sensorischen oder geistigen Fähigkeiten geeignet.

SICHERHEITSHINWEISE

1. Dieses Produkt ist nicht für industrielle oder gewerbliche Anwendungen bestimmt. Verwenden Sie das Gerät nicht für Anwendungen, für die es nicht ausgelegt ist.
2. Dieses Produkt ist nicht für die Verwendung durch Kleinkinder oder andere Personen ohne Aufsicht von Erwachsenen vorgesehen. Kleinkinder sollten beaufsichtigt werden, um sicherzustellen, dass sie nicht mit dem Produkt spielen.
3. Kinder und andere Besucher sollten vom Arbeitsbereich ferngehalten werden.
4. Verwenden Sie das Gerät nicht, wenn Sie müde oder alkoholisiert sind.
5. Stellen Sie sicher, dass der Arbeitsbereich gut belüftet ist.
6. Verwenden Sie das Gerät nicht in der Nähe von brennbaren Materialien oder Gasen.
7. Nicht im Regen verwenden.
8. Dieses Gerät sollte in einem trockenen, sicheren Bereich aufbewahrt werden, in dem Kinder keinen Zugang haben.
9. Stellen Sie sicher, dass die Stromquelle den auf dem Typenschild des Geräts angegebenen Anforderungen entspricht.
10. Kontrollieren Sie die Position des Stromkabels bevor Sie mit dem MONO Lighter arbeiten.
11. Bei Arbeitsunterbrechungen für mehr als 30 Minuten ziehen Sie das Netzkabel aus der Netzsteckdose. Richten Sie die Spitze niemals auf Personen oder Tiere.
12. Um Verletzungen zu vermeiden, tauchen Sie das Gerät nicht in Flüssigkeiten ein.
13. Versuchen Sie keine Arbeiten, die über die Kapazität dieses Geräts hinausgehen.
14. Tragen Sie das Gerät nicht am Stromkabel. Dies kann zu Schäden oder Stromschlag führen. Ziehen Sie den Stecker nicht mit dem Netzkabel aus der Steckdose.
15. Das Netzkabel sollte überprüft werden. Weist es Beschädigungen auf, ist es zu Ihrer eigenen Sicherheit wichtig, dass ein autorisierter Elektrotechniker Reparaturen an diesem Produkt vornimmt.



WARNUNG!

- Bei unsachgemäßem Umgang mit dem Gerät kann es zu Schäden kommen.
- Blocken Sie nicht den Lufteinlass und Luftauslass des Geräts.
- Lassen Sie es nicht fallen. Ritzen Sie die Kunststoffabdeckung niemals mit scharfen Gegenständen.
- Verwenden Sie keine explosionsfähigen Gase.
- Achten Sie darauf, dass die Wärme in brennbare Materialien geleitet wird.
- Stellen Sie das Gerät nach Gebrauch auf den Ständer und lassen Sie es mit ausreichender Zeit abkühlen.
- Lassen Sie das Gerät nicht unbeaufsichtigt, wenn es eingeschaltet ist.
- Achten Sie darauf, dass das Gerät richtig positioniert ist.
- Vermeiden Sie, dass die heißen Teile des Geräts das Kabel oder andere gefährliche Materialien berühren.



Lesen Sie alle Sicherheitshinweise und Leitlinien!



CI Doppelt isoliert!




CE-Konform für relevante Sicherheitsstandards!



Recycling!

Technische Daten

Nennspannung:	220 – 240 V ~ 50 Hz
Nennleistung:	2000 W
Nenntemperatur:	600 °C
Schutzklasse:	II

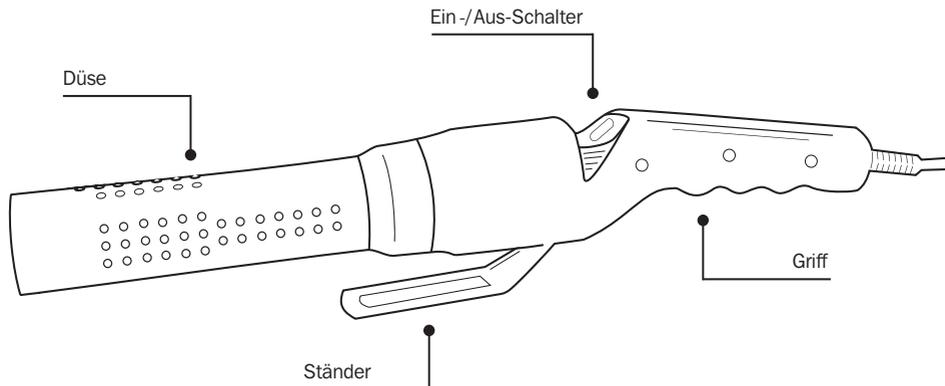

BEDIENUNGSANWEISUNG

Das Gerät einschalten

Mit dem Daumen den Ein- / Ausschalter in Richtung Griff drücken und festhalten.

Das Gerät ausschalten

Lassen Sie den Ein- / Ausschalter los. Der Schalter geht wieder in die Ausgangsposition und schaltet sich aus.

Den Grill anzünden

- A. Füllen Sie den Grill mit Kohle.
- B. Stecken Sie den MONO Lighter in die Kohlen.
- C. Ziehen Sie den Mono Lighter 10 cm zurück sobald die ersten Funken kommen
- D. Richten Sie den Mono Lighter auf das Glutnest.

WARTUNG UND REINIGUNG

Reinigen Sie das Gerät bei Bedarf mit einem trockenen Tuch, nachdem sich das Gerät abgekühlt hat. Bitte lagern Sie das Gerät nur in trockenen und geschlossenen Räumen.

WARNUNG!

Ziehen Sie den MONO Lighter leicht nach hinten, wenn Funken oder Glut entstehen. Der MONO Lighter kann nicht im Feuer bleiben, da sonst die Metallummantelung der Düse schmilzt.

Holzkohle gibt es in vielen Formen und Materialien. Die Zündungszeit unterscheidet sich je nach Material und Produktionsqualität.

Leider gibt es nach wie vor zu viel Holzkohle von geringer Qualität. Ursachen hierfür sind zum Beispiel, unorganisierte Produktionsabläufe oder zu rasant wachsende Bäume. Qualität lässt sich schnell und gut durch das Anzünden der Holzkohle erkennen.

Qualitätskohle glüht schnell (ohne Funken) und lässt sich in wenigen Minuten mit dem MONO Lighter starten. Selbstverständlich lassen sich auch Briketts in nur wenigen Minuten mit dem MONO Lighter anzünden.

CONGRATULATIONS!

... for buying an appliance from Monolith Grill GmbH and the trust placed in us. We wish you much pleasure and at any time: 'Good Glow'!

Read and understand these instructions before you start assembling and / or barbequing.

ATTENTION!

This manual contains **important information** about the correct use and handling of the lighter. **Before the usage** of the lighter it's important to read and follow all kinds of instructions and warnings written in this manual. Keep this manual for future reference.

We only grant a guarantee if these operating instructions were read completely and handed in with the bill.



Became curious?

Discover the entire range of accessoires and the various possibilities of usage: Visit our website

www.monolith-grill.eu
www.monolith-icon.com
or our Youtube-channel
Monolith Grill:



IMPORTANT!

Please read these operating instructions before using the appliance for the first time and keep them with the appliance at all times.

WARNING!

Read and observe the following safety instructions before using this appliance to avoid personal injury. It is important to read the instruction manual to understand the applications, limitations and potential hazards associated with this appliance. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

SAFETY INSTRUCTION

1. This appliance is not designed for industrial or trade applications. Do not use the appliance to perform applications for which it is not designed.
2. This appliance is not intended for use by young children or infirm persons without adult supervision. Young children should be supervised to ensure they do not play with it.
3. Children and other visitors should be kept away from the work area and should not be permitted to handle the appliance or power cable.
4. Do not use when tired or fatigued.
5. Ensure the work area is well ventilated.
6. Do not use in the rain or in wet or damp conditions.
7. This appliance should be stored in a dry, safe area where children do not have access.
8. Ensure that the power source conforms to the requirements stated on the name plate of the appliance.
9. Check the position of power cables before commencing work ensuring that it is positioned to the rear of the machine.
10. For pauses in work for more than 30 minutes, disconnect the power cord from the mains power supply.
11. Never point the tip at people or animals.
12. To avoid personal injury do not submerge the appliance in any liquid.
13. Do not attempt tasks beyond the capacity of this appliance.
14. Do not force the appliance to do applications it is not designed for.
15. Do not carry the appliance by the power cable. This may cause damage or electric shock.
16. Do not pull the plug out of the power supply by using the power cable.
17. Protect the cable from heat, oil and sharp objects.
18. The power supply cable should be regularly checked and if damaged should be repaired by an authorized electrical specialist
19. For your own safety it is important that an authorized electrical specialist carry out any repairs to this appliance.
20. Disconnect the appliance from the mains before cleaning or maintaining the appliance.



WARNING!

- A fire may arise if the appliance is not used with care.
- Do not block the air inlet and outlet of the appliance.
- Do not smash or drop it. Never scratch the plastic cover with sharp objects.
- Do not use in the presence of an explosive atmosphere.
- Be aware that heat may be conducted to combustible materials which are out of sight.
- Place the appliance on its stand after use and allow it to cool down before storage.
- Do not leave the appliance unattended when it is switched on.
- Ensure that the appliance is properly positioned.
- Do not allow the hot parts of the appliance to touch the cord or other flammable materials.



Read all the safety instructions and Guidelines



Double insulated!




Conforms to relevant safety standards!



Recycling!

Specifications

Rated Voltage:	220 – 240 V ~ 50 Hz
Rated Power:	2000 W
Rated temperature:	600 °C
Protection class:	II

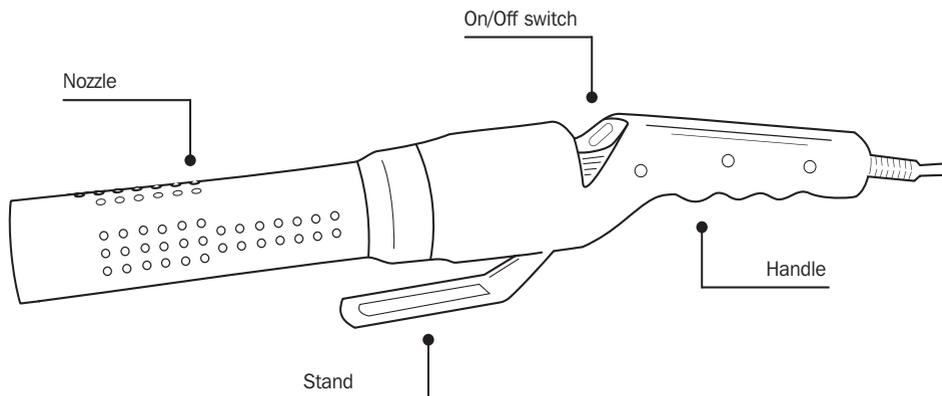

OPERATING INSTRUCTIONS

Switching on

Using your thumb, push the On/Off switch (1) towards the handle and hold. After a few minutes the device will have reached operating temperature.

Switching off

Release the On/Off switch (1). The switch will slide back into the starting position and switch itself off.

Light the barbecue

- A. Always make a pile of the coal or briquettes.
- B. Touch the pile of coal with the fire starter.
- C. Draw back the fire starter a little bit when sparks appear (after 10 - 20 seconds).
- D. Continue to point the fire starter in the same direction for at least 60 seconds.

Light the fireplace

- A. Build a pile of small logs or branches.
- B. Touch with the fire starter (or put a small piece of newspaper between the logs).
- C. Draw back the fire starter when flames appear.
- D. Continue pointing the fire starter in the same direction.

MAINTENANCE AND CLEANING

If necessary, please use dry cloth to clean your appliance after unplugging and cooling down. The appliance is not intended to be left outdoors, please store dry and indoors only.

WARNING!

Pull the fire starter slightly backwards when sparks or glow appear. Fire starter can not stay in fire. Otherwise, the metal cover of the nozzle will be melted.

Charcoal comes in many forms. There is lump charcoal, hard wood etc. The ignition time will differ depending on material and production quality.

If we start with charcoal it is mostly made from wood. Much of the charcoal on the market is poor quality, often made from fast growing trees and often chilled with water to speed production. Poor quality charcoal can spark when ignited (which is not dangerous but perhaps not so fun).

Charcoal that is produced from hard wood however will take longer to ignite and get ready to use. Good quality charcoal lights quickly without sparks, is ready to use in a couple of minutes with the MONO Lighter and burns during a longer period.



MONOLITH Grill GmbH | Frida-Schröer-Straße 56
D - 49076 Osnabrück | info@Monolith-grill.de

MONOLITH-GRILL.EU