
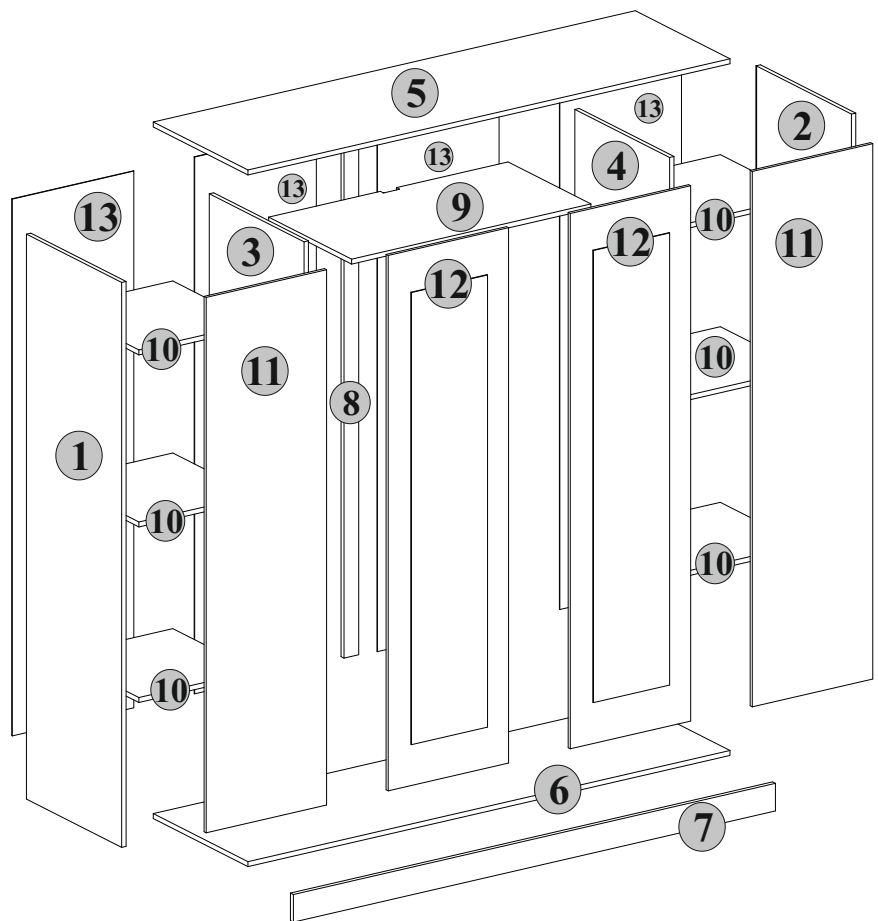
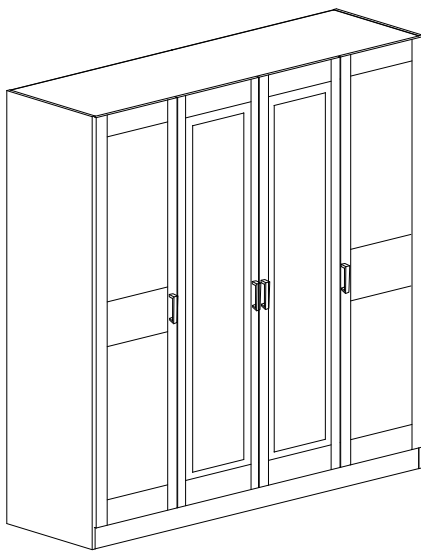







“Toni 4S”

versionsnummer: 08.10.2021

















Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.



3x  k7	8x  n2	8x  n3	100x  1x16 l1	6x  k1	30x  l9	4x  c93
64x  φ3.5x13 mm p1	46x  φ3.5x16 mm p3	8x  φ4x30 mm p9	24x  φ5x17 mm d1	4x  d17	4x  d15	2x  n302
35x  r16	35x  φ15 #12.5 r1	35x  s2	16x  φ8x30 mm f1	32x  φ6.3x13 mm e2	16x  a2	16x  b1




2

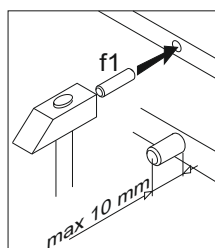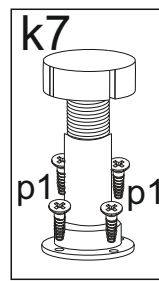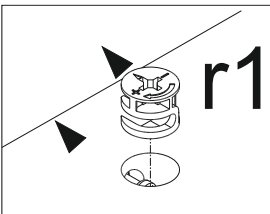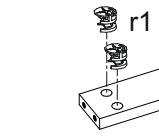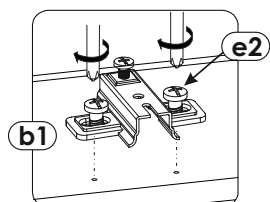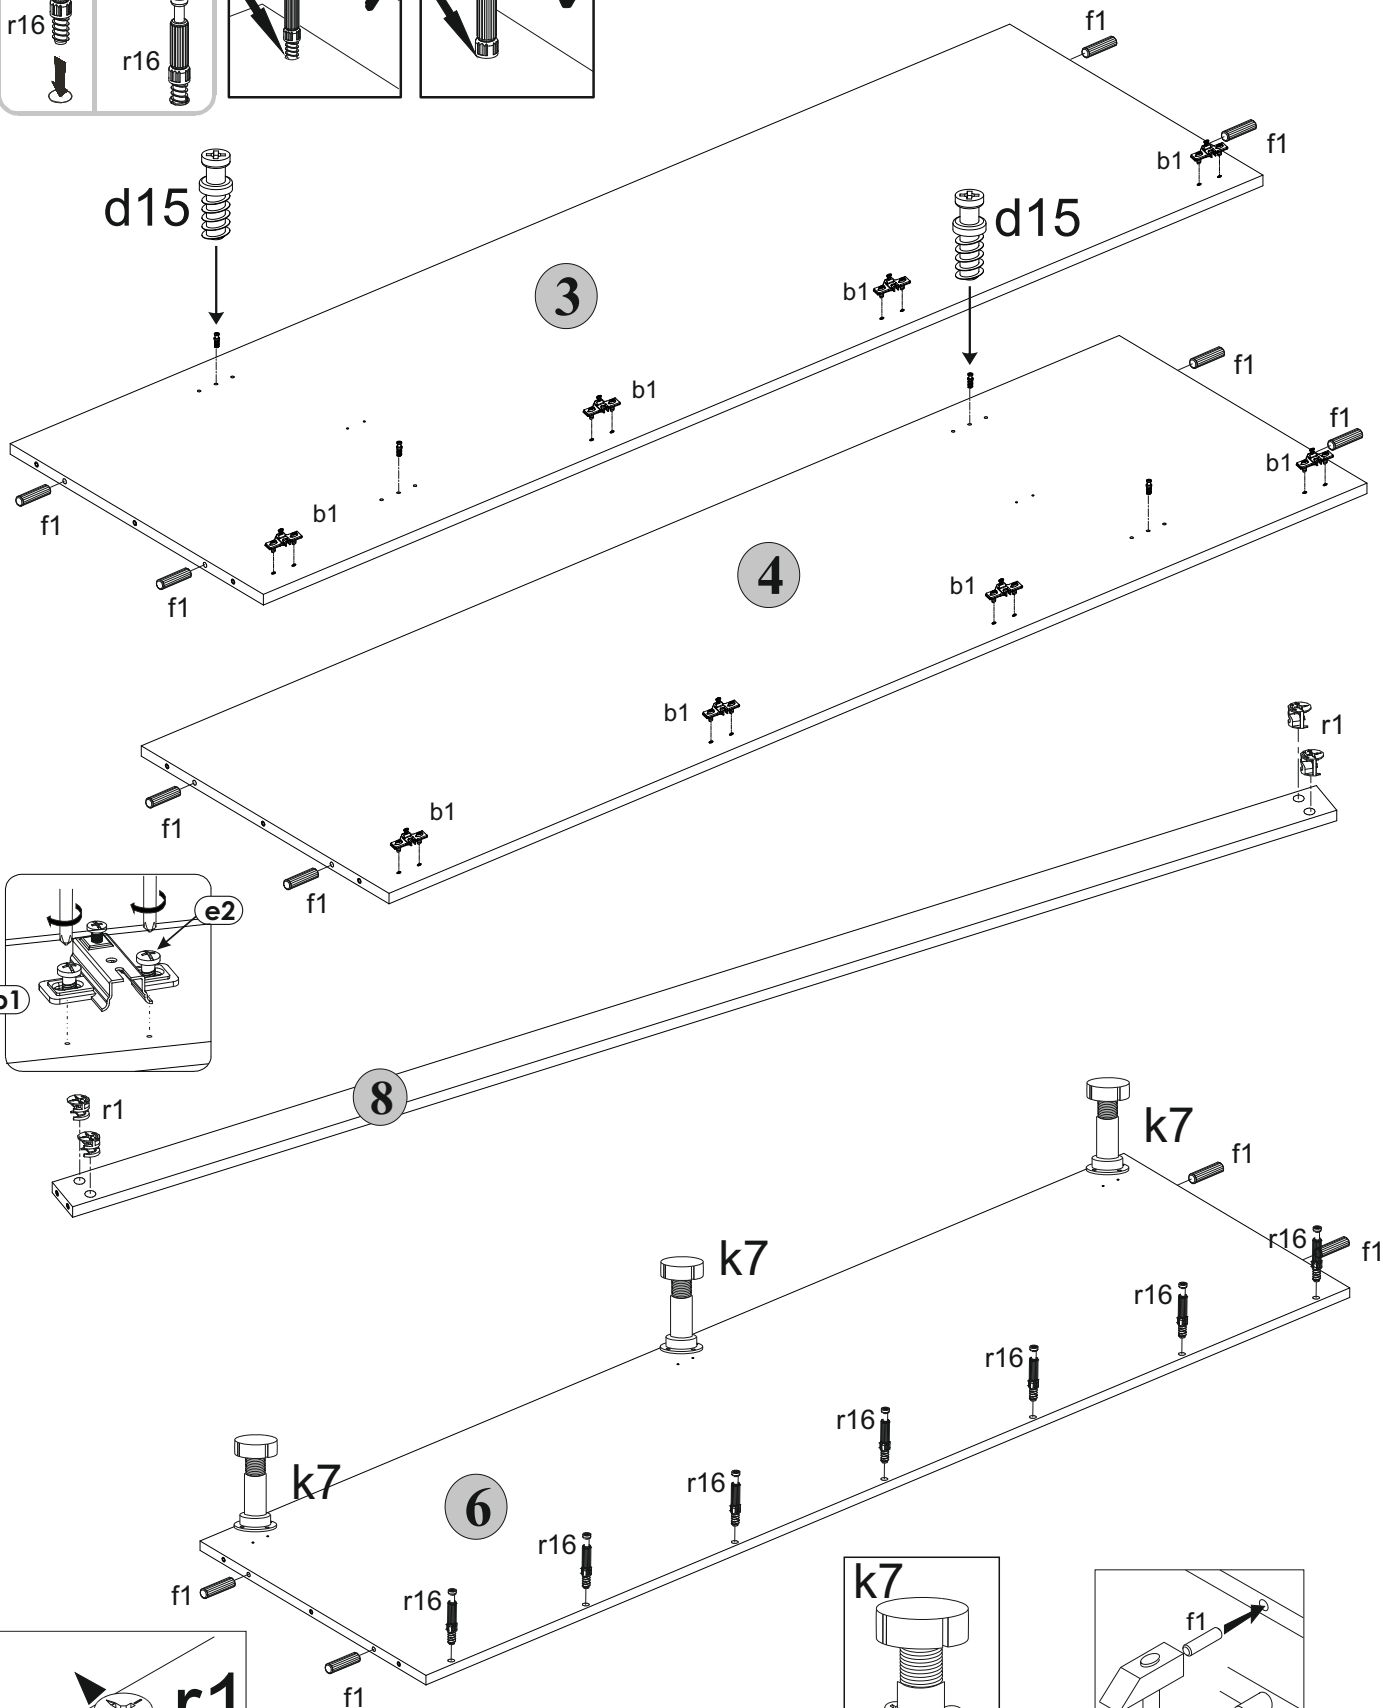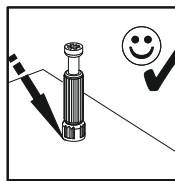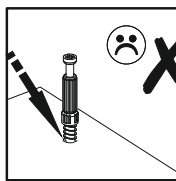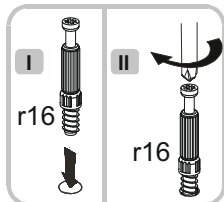



3


3

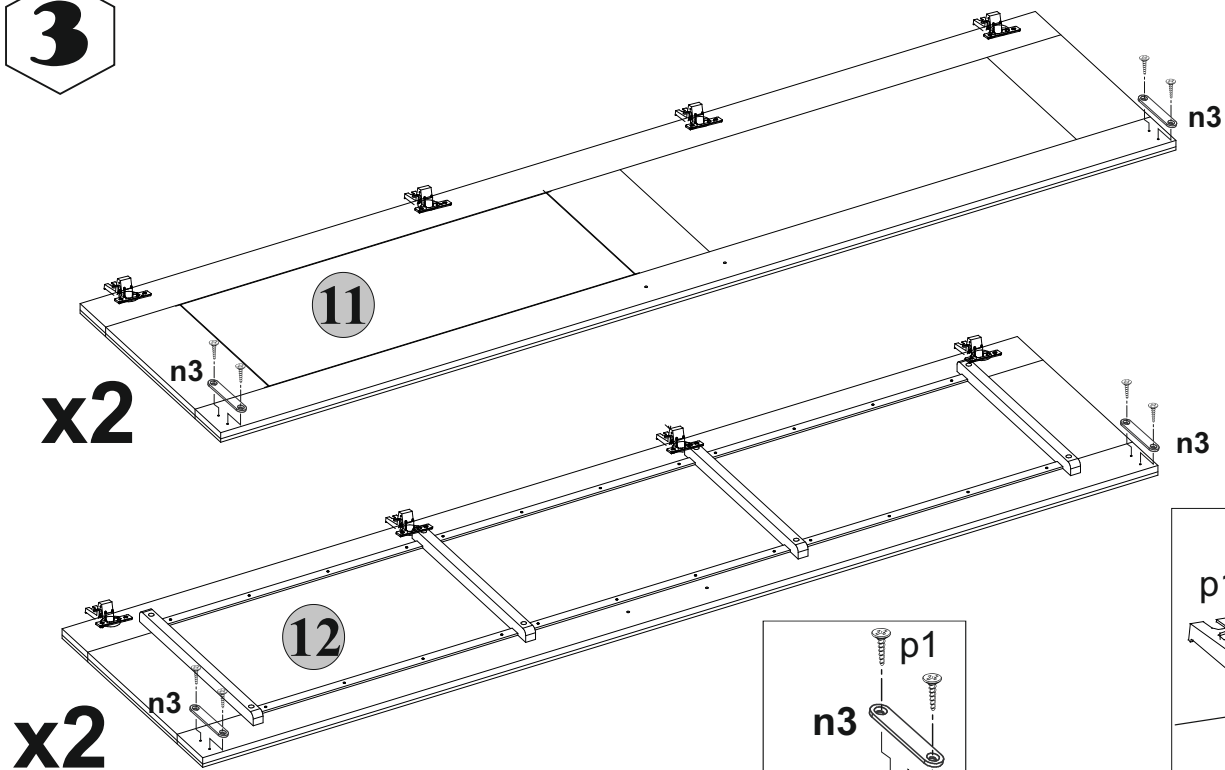





- 16x a2
- 32x p1
φ3.5x13 mm
- 8x n3

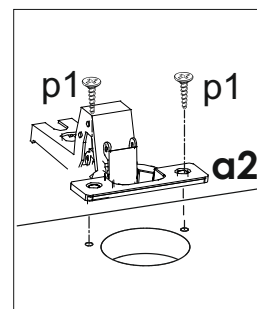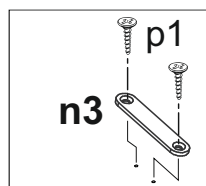

4









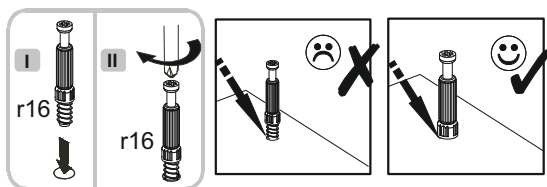


- 8x r16
- 6x r1
φ15 #12.5
- 4x n2
- 8x p3
φ3.5x16 mm

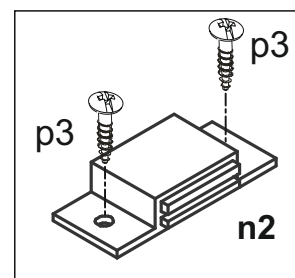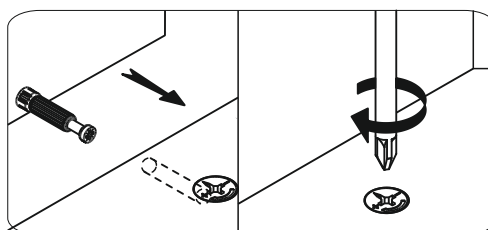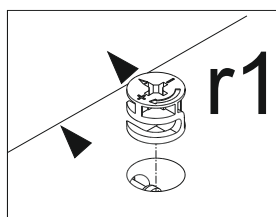
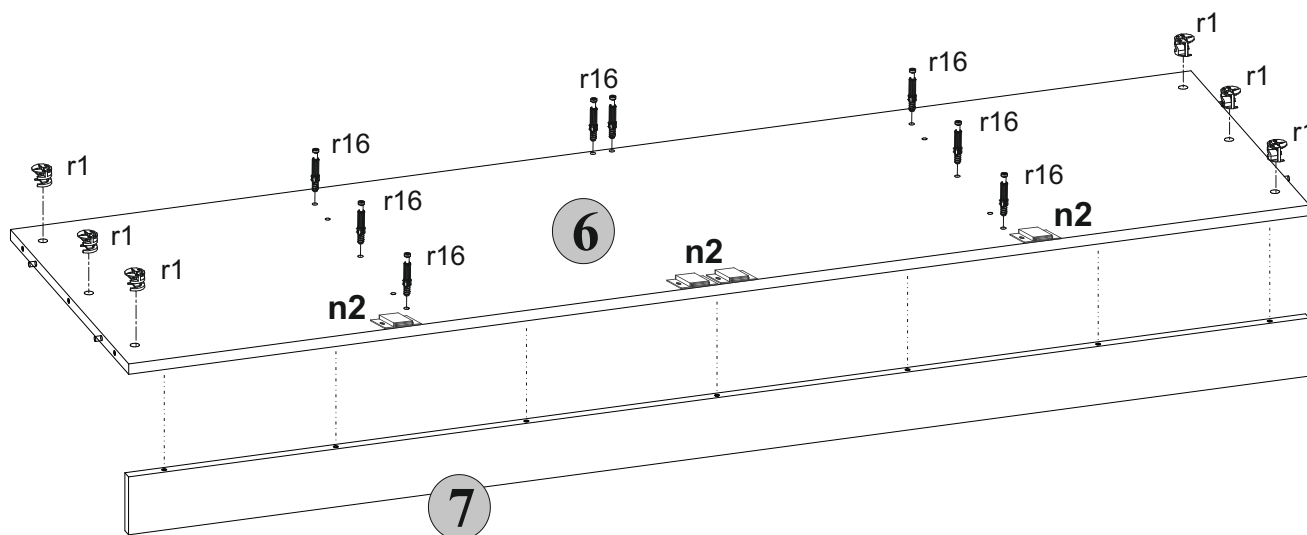


4

5

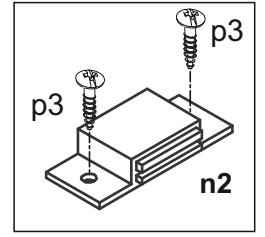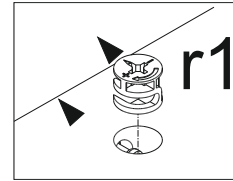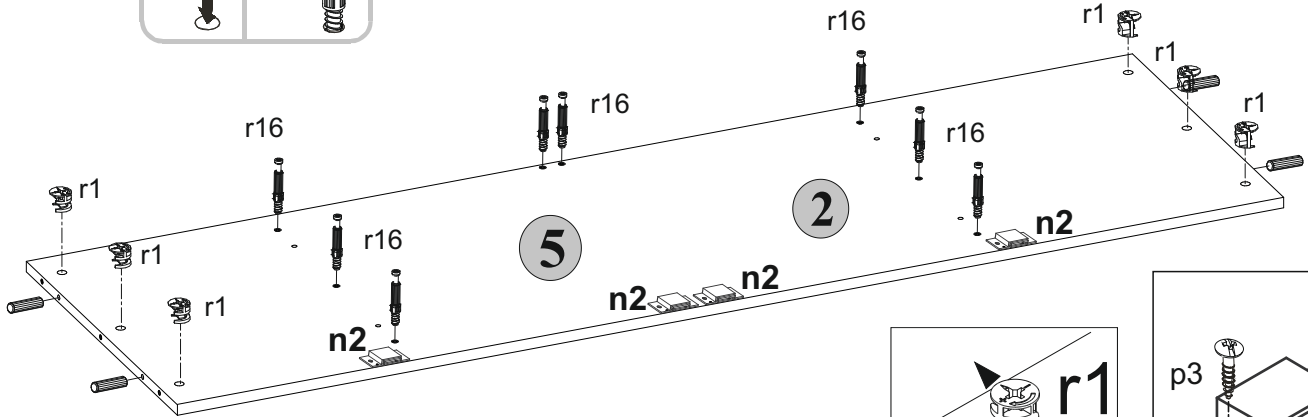
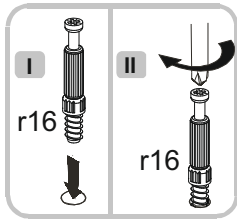


6




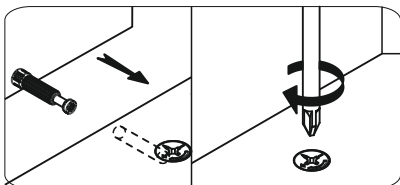
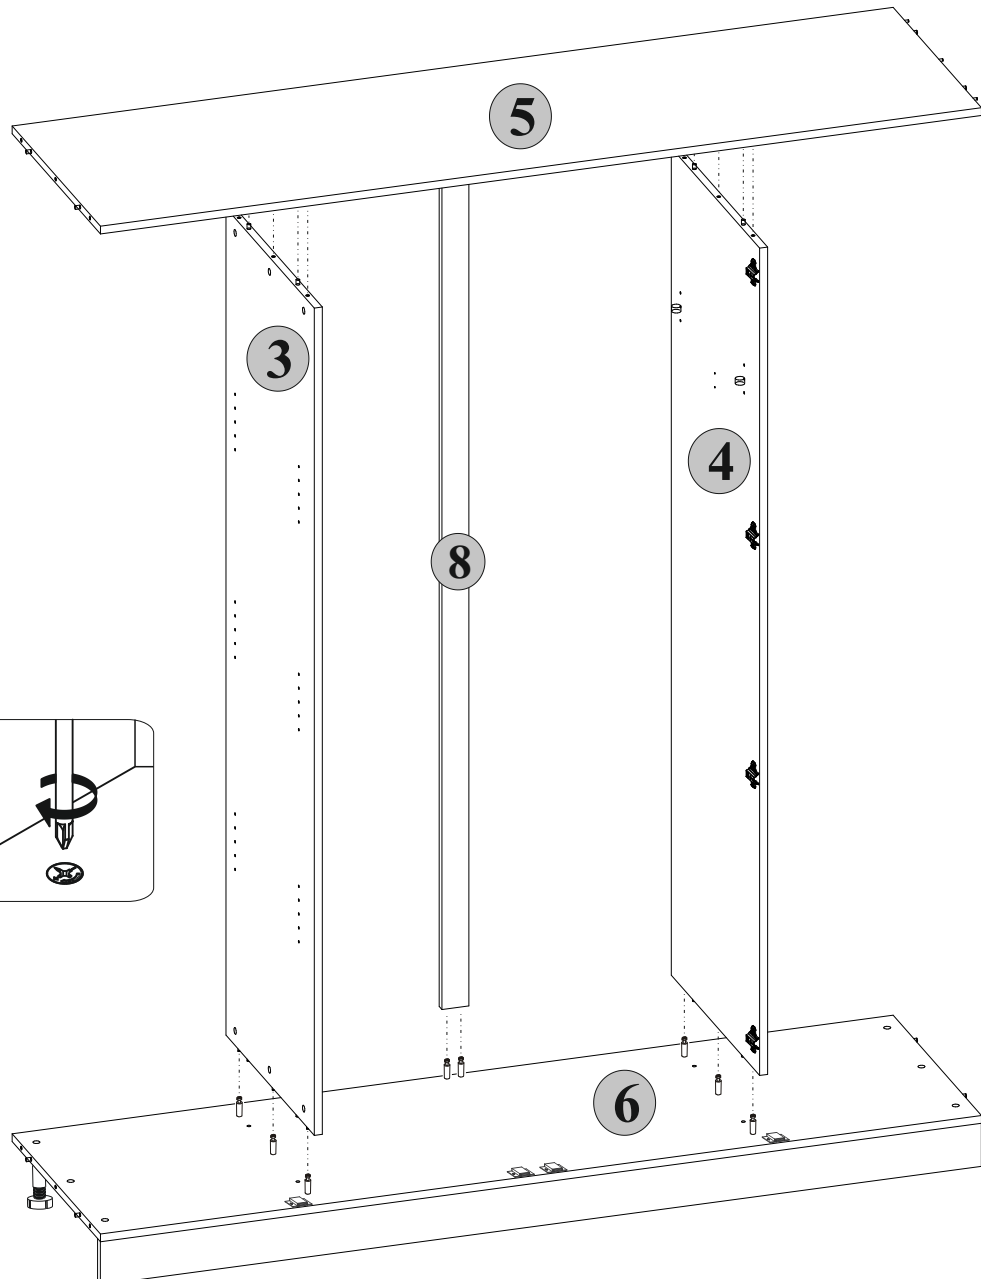


5

7






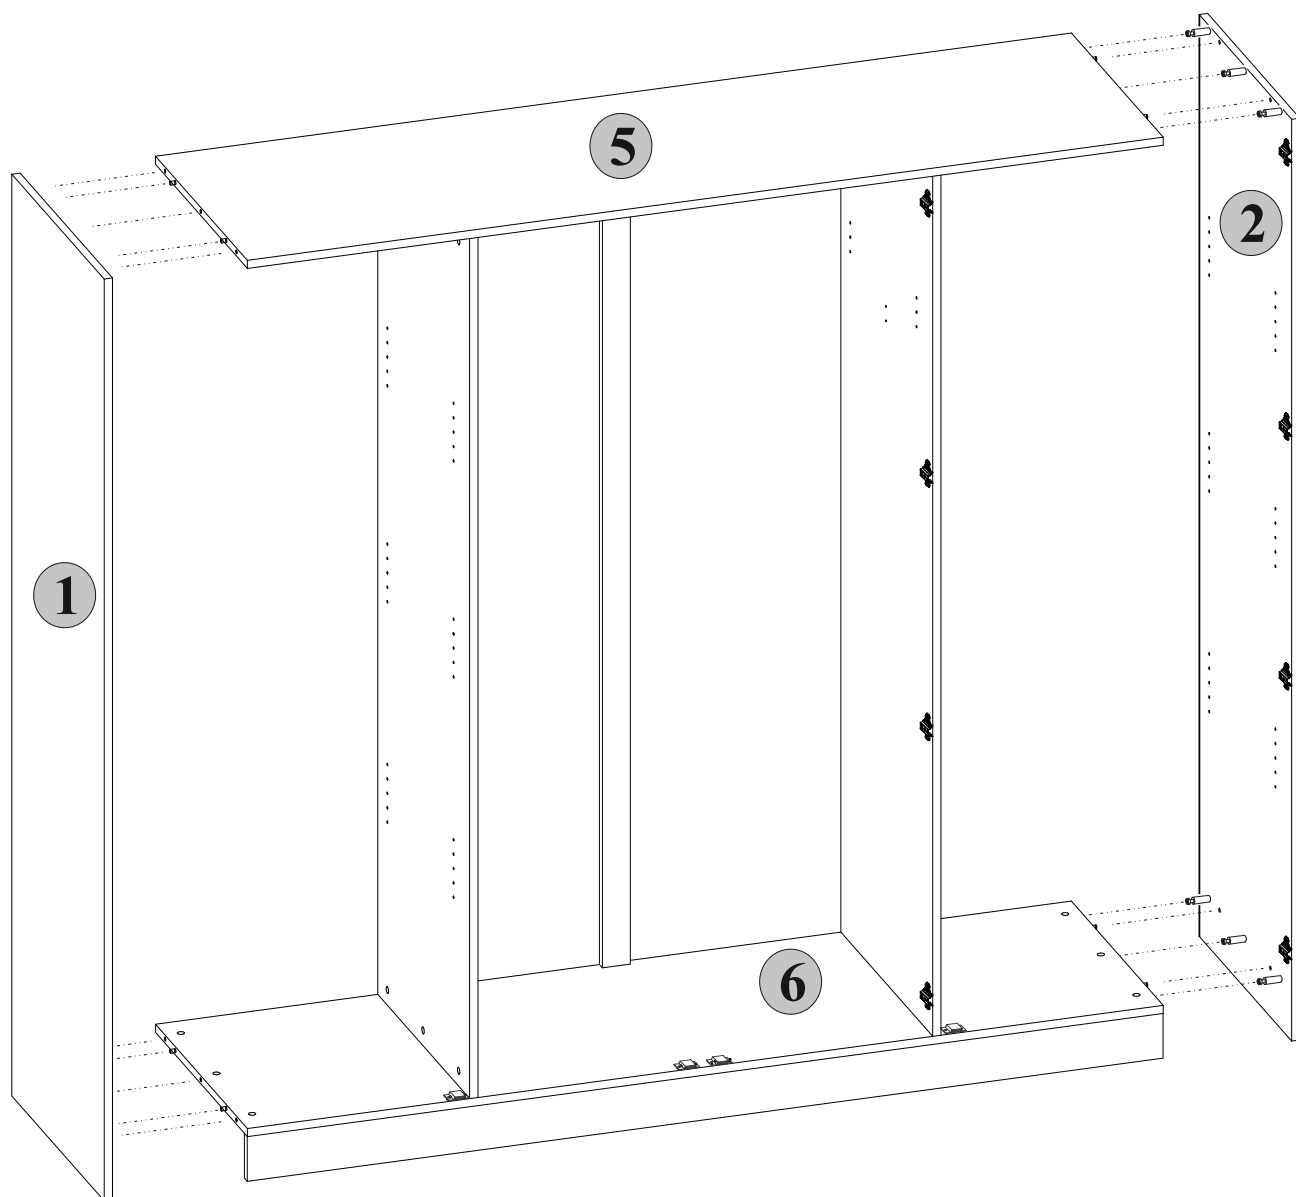
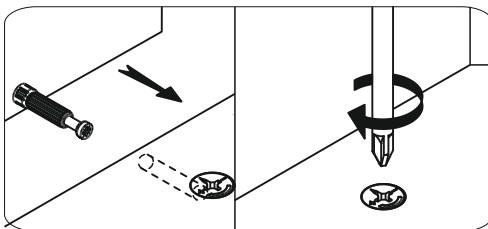


8

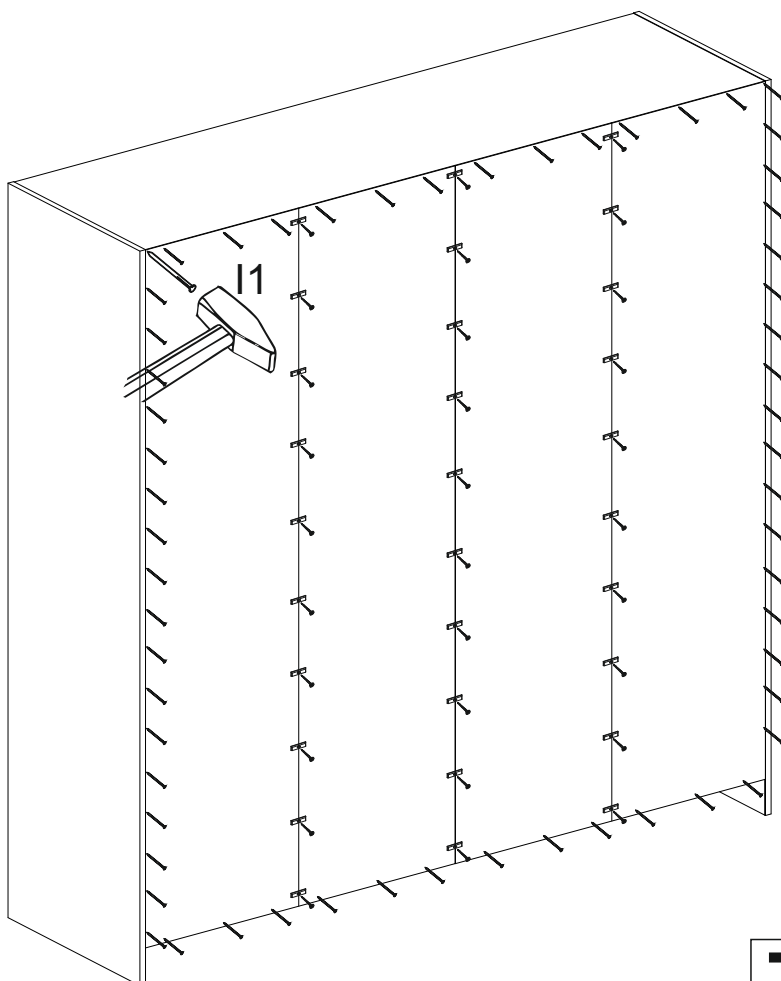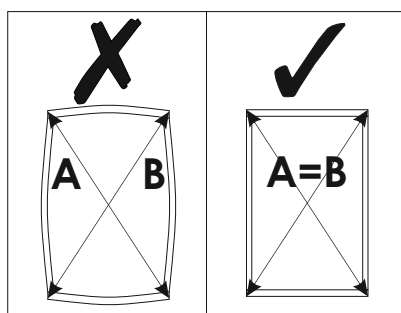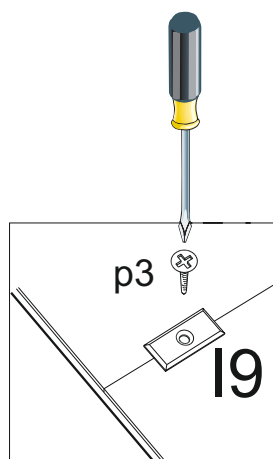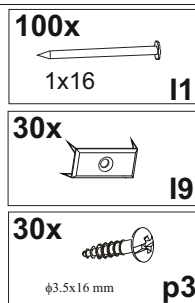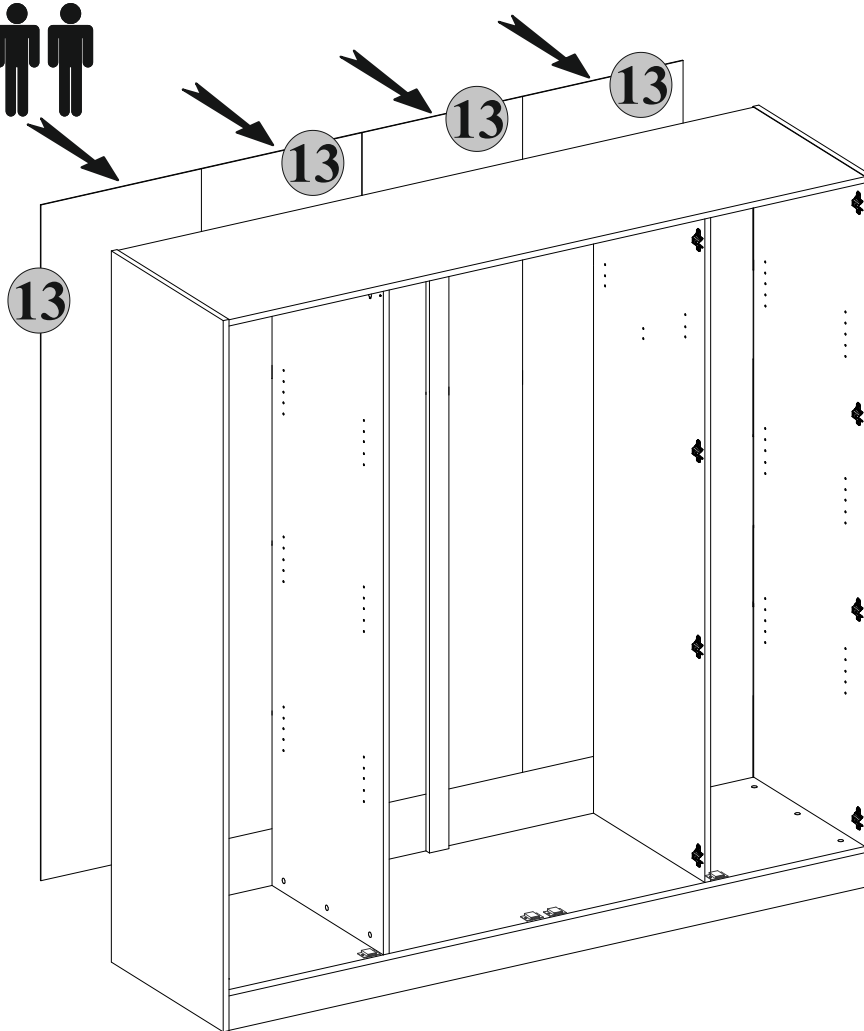


7

9

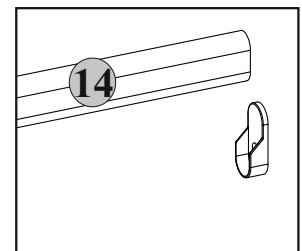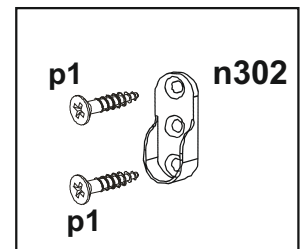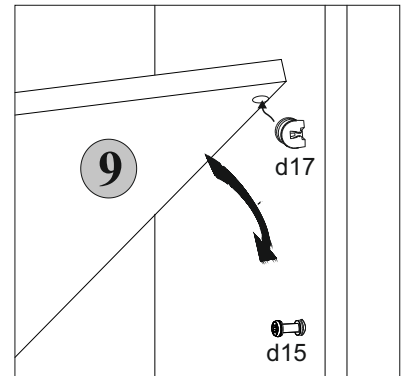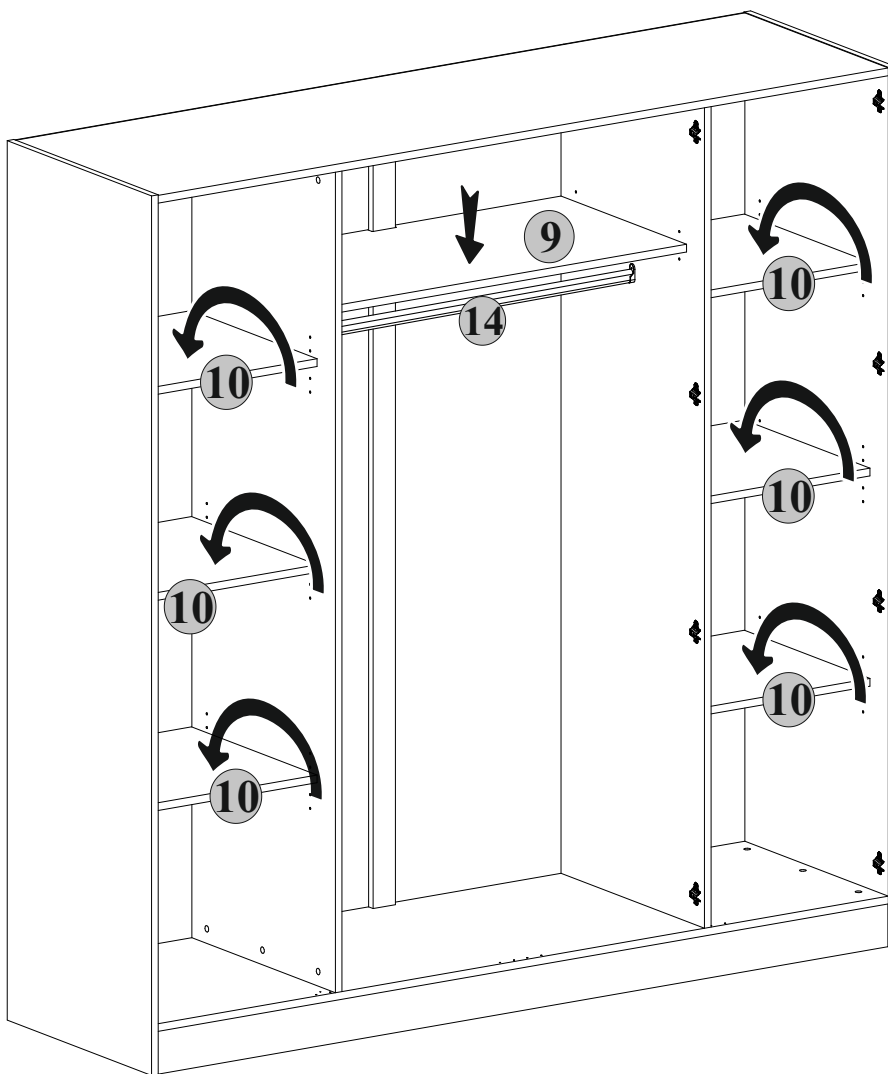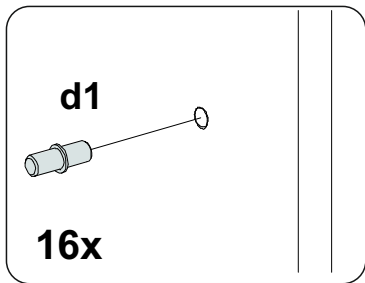






8

10

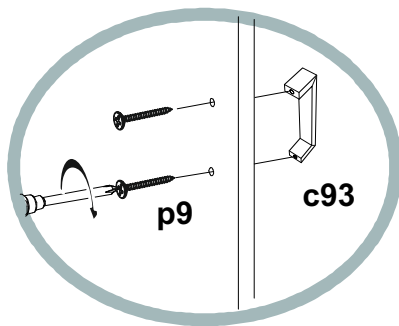

4x
c93

8x
p9
φ4x30 mm

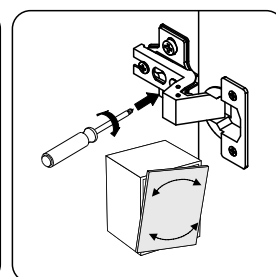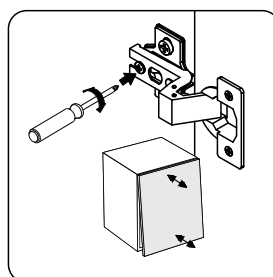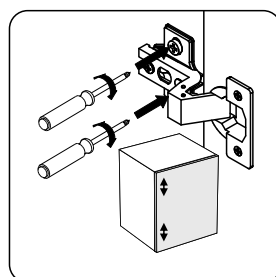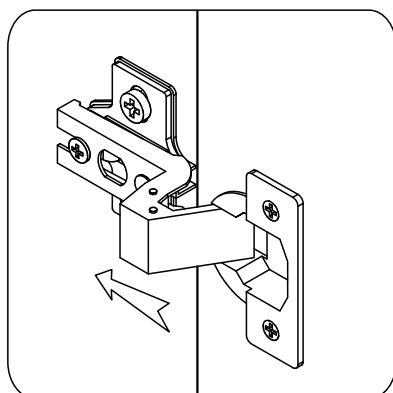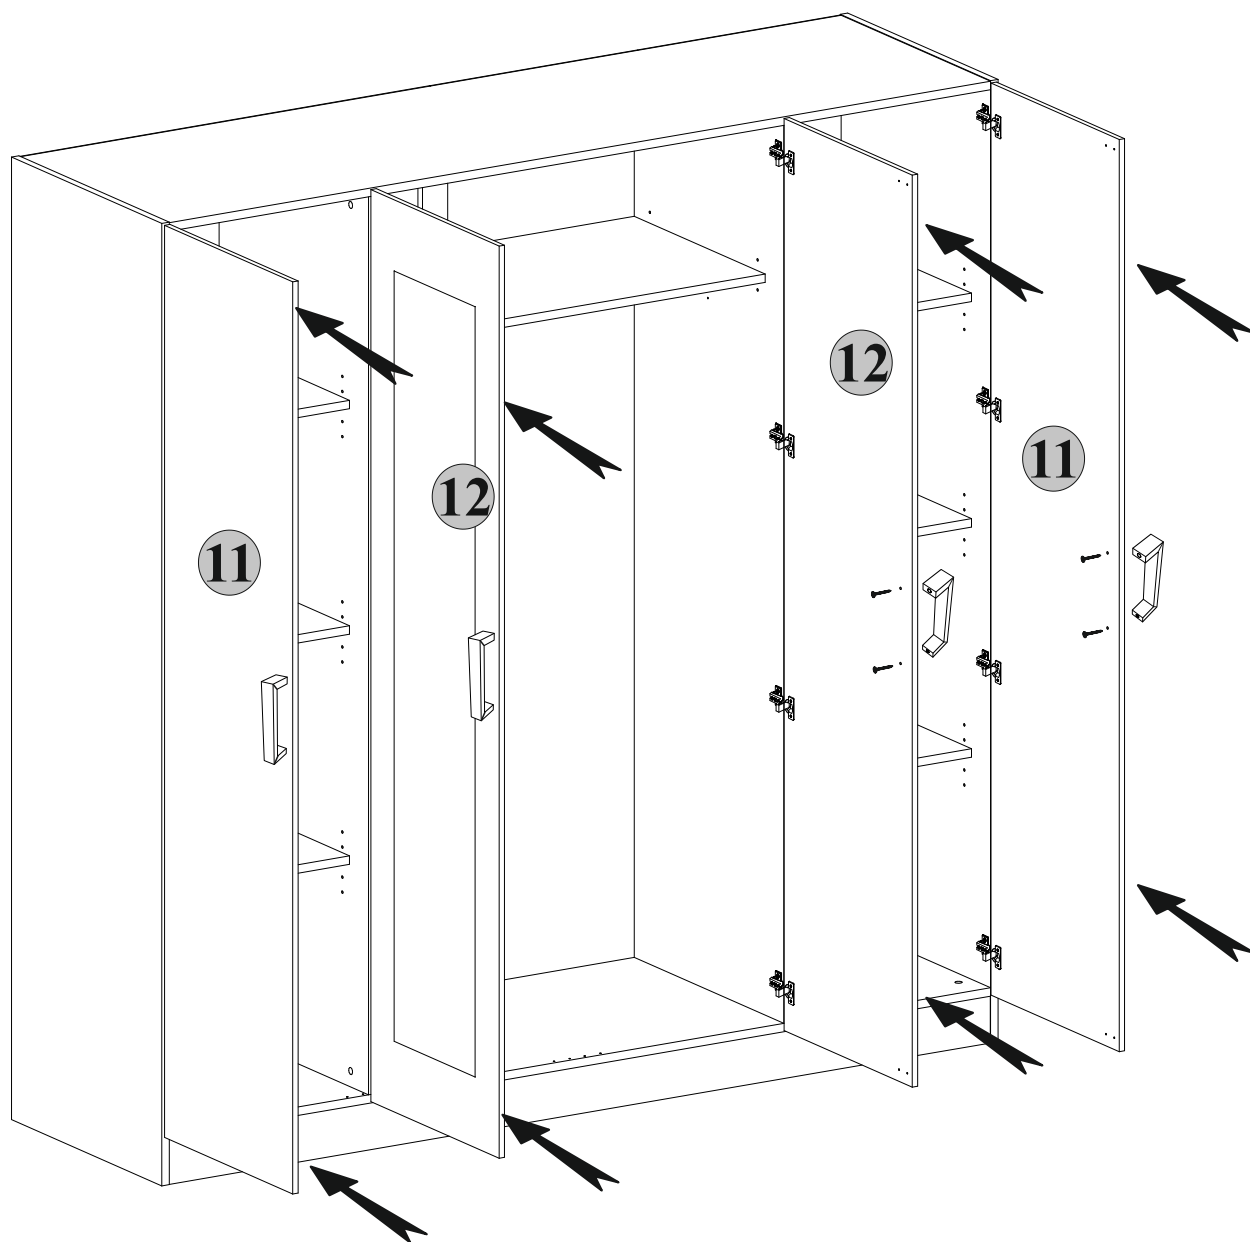

9