
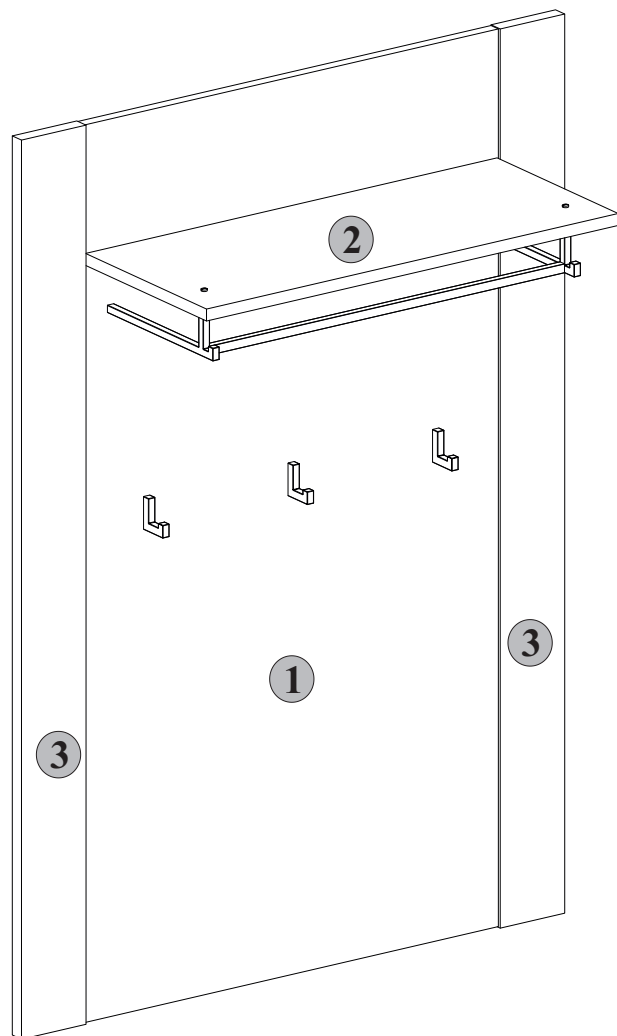
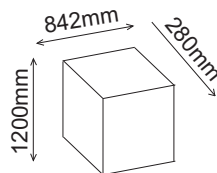
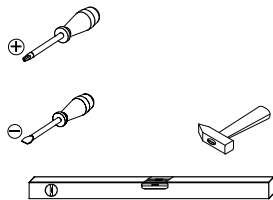








5814


versionsnummer: 20.05.2025

Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.



B1		B2		B3	
8x  f6	8x  r10	2x  t14	1x  z1	3x  g31	2x  j5
28x  s2	16x  r1	4x  e3	2x  n3	1x  g33L	1x  g33R
16x  r16	2x  f1	3x  s1	3x  e9	1x  g34	8x  j30





1

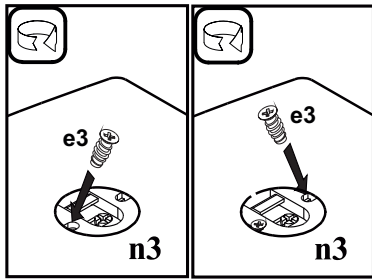


4x
5x10.5 e3

2x
n3

16x
φ15 #12.5 r1







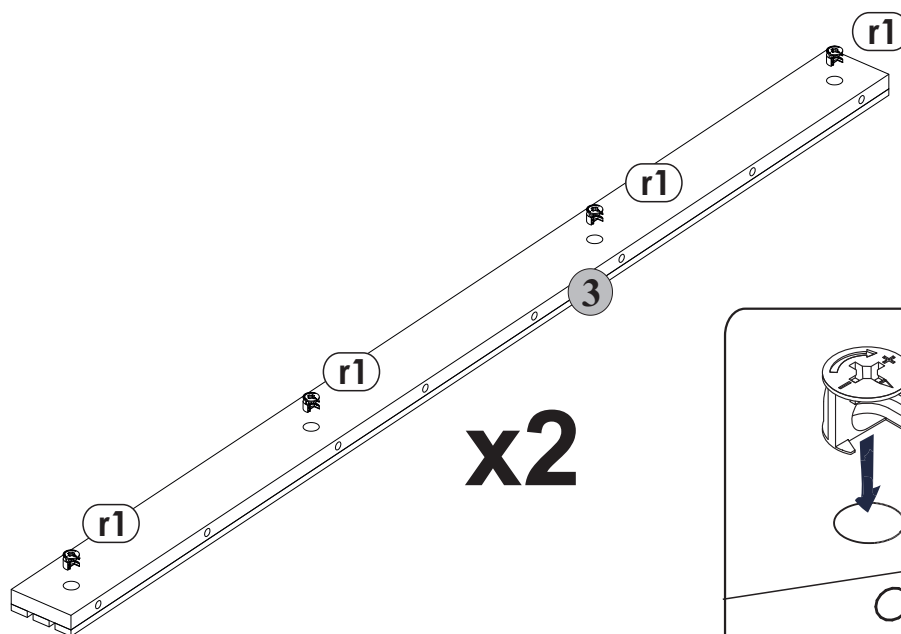
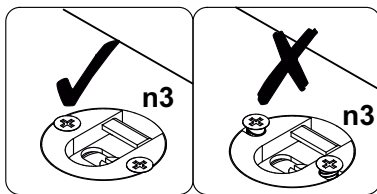
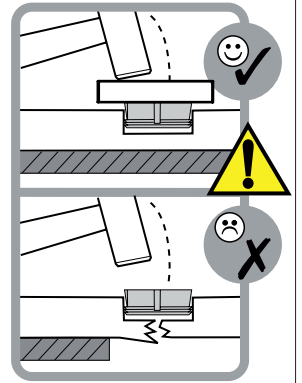
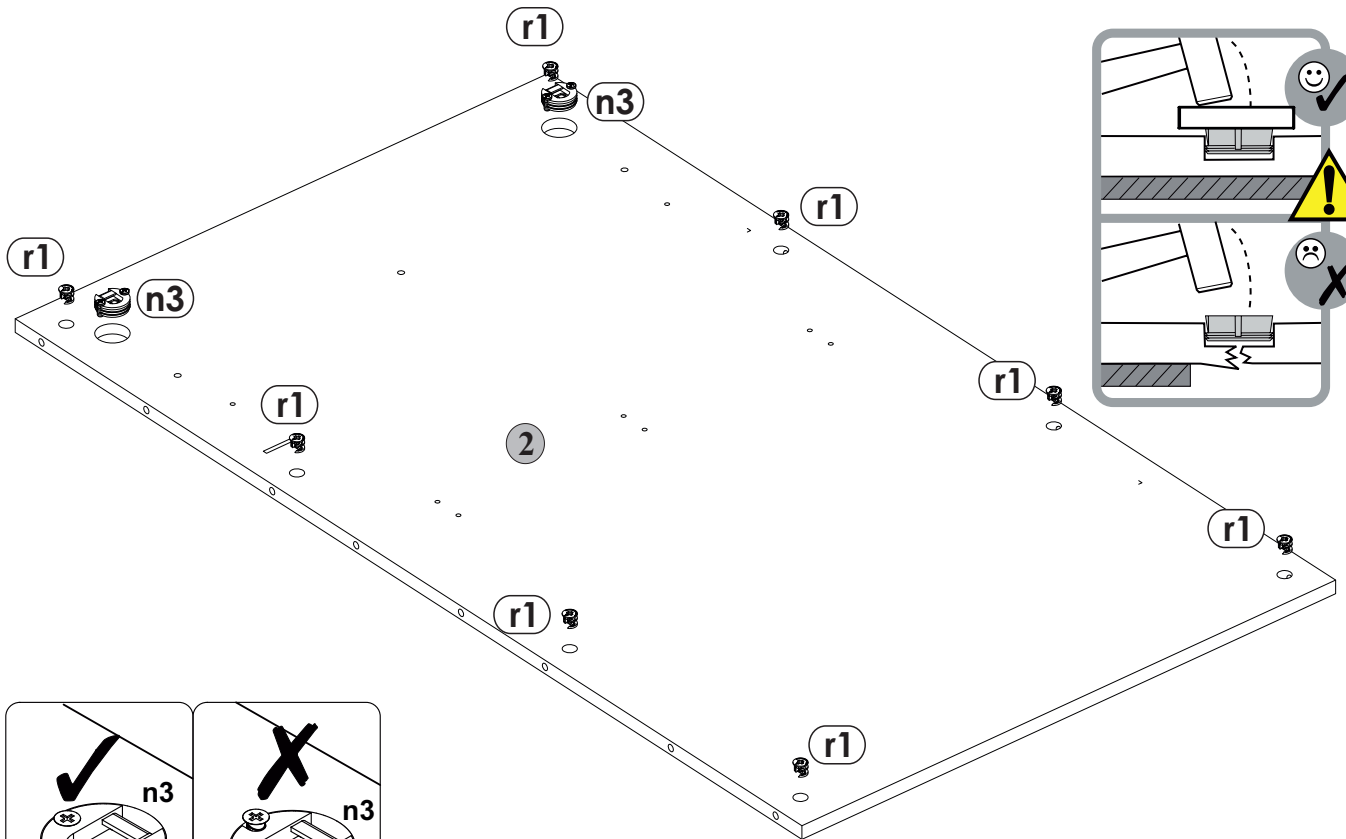


x2

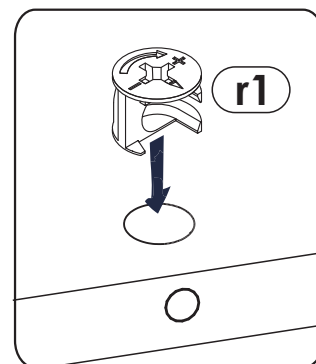



2


2

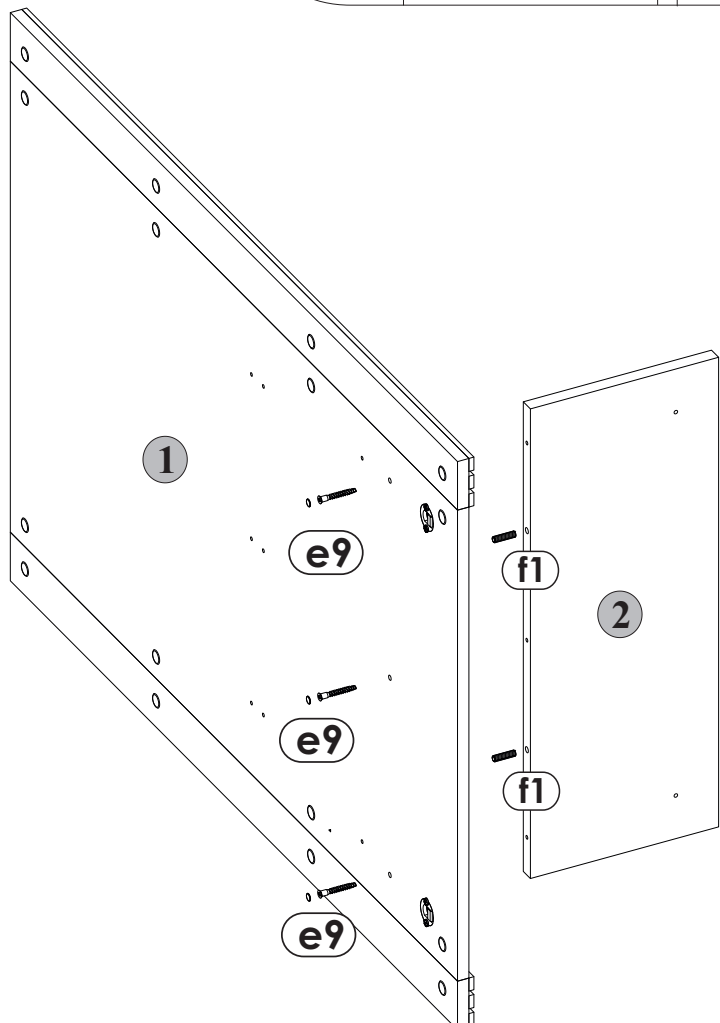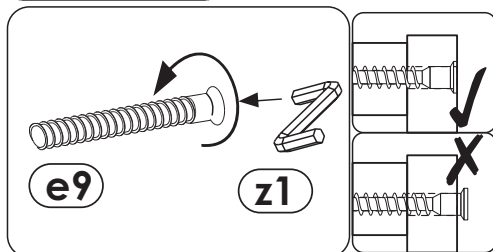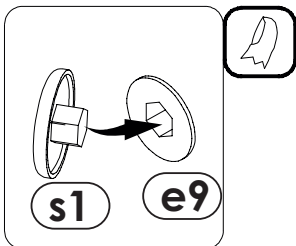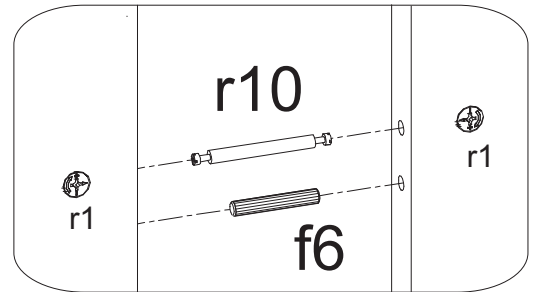

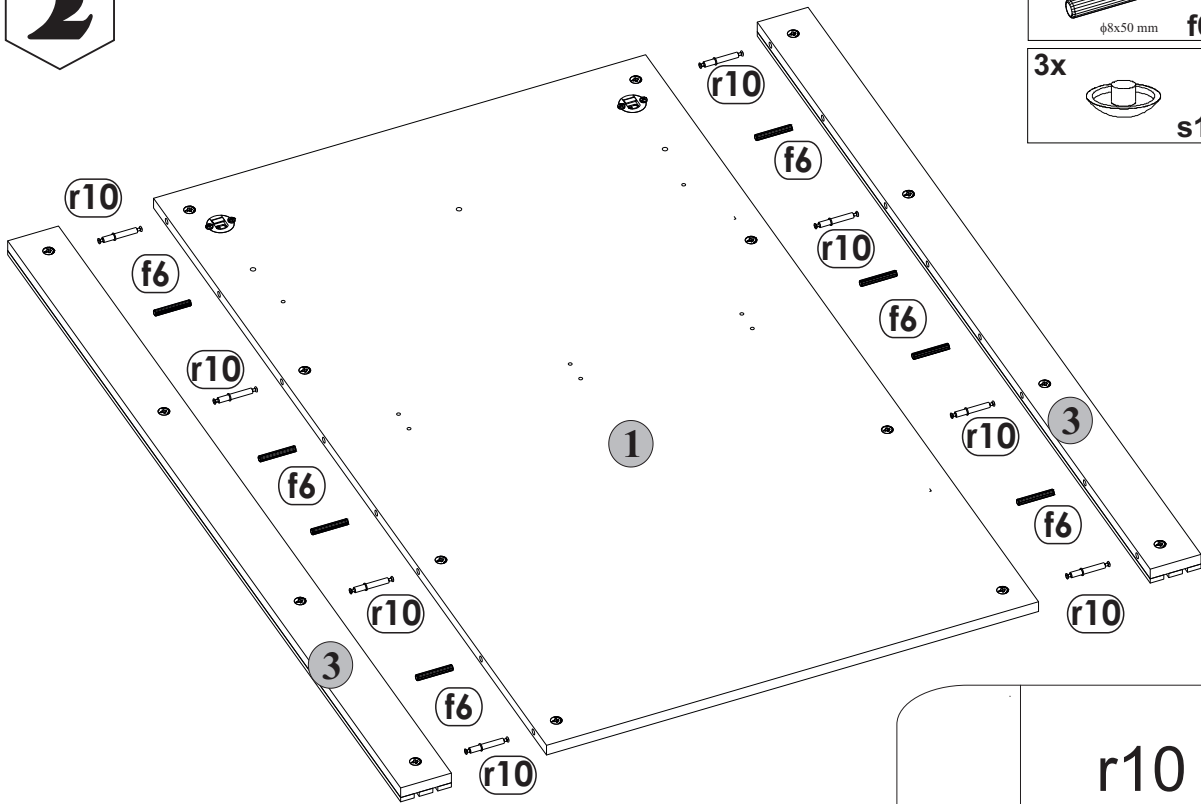


3

3

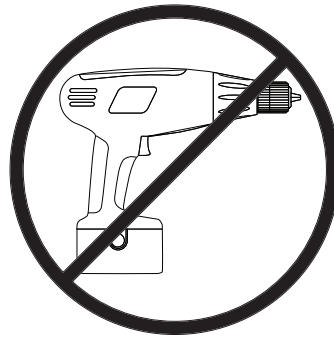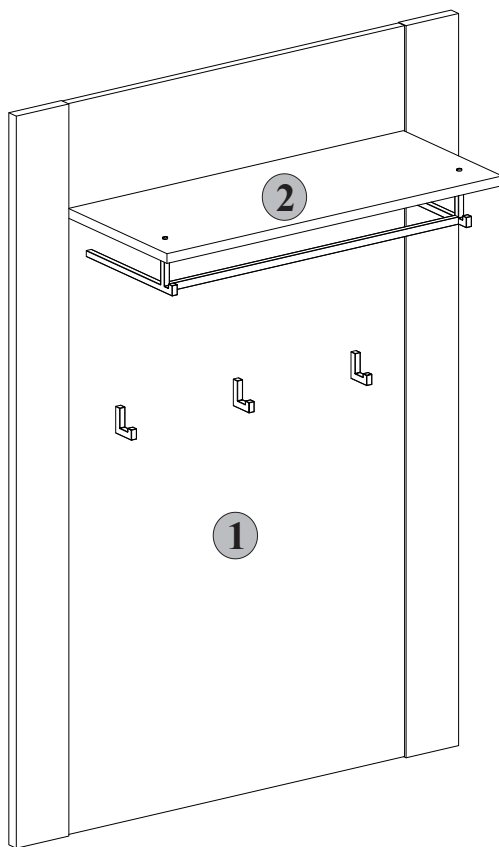

- 3x  **g31**
- 1x  **g33L**
- 1x  **g33R**
- 1x  550 mm **g34**
- 8x  $\phi 4 \times 20$ mm **j30**
- 2x  $\phi 4 \times 25$ mm **j5**








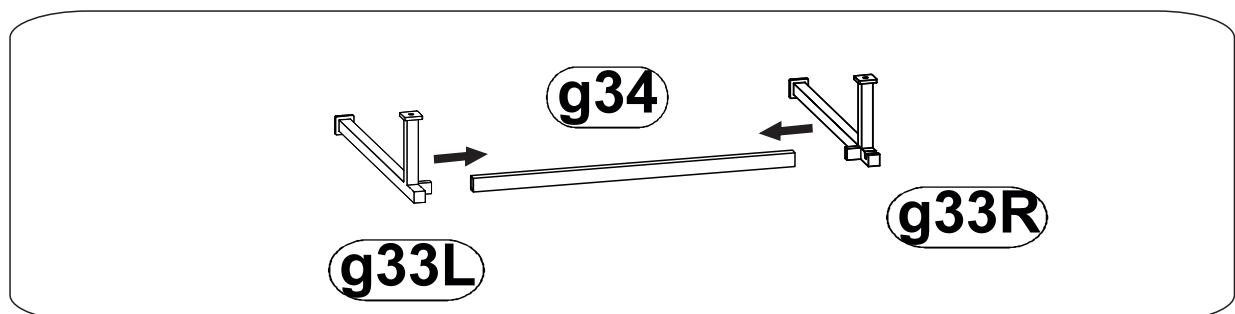
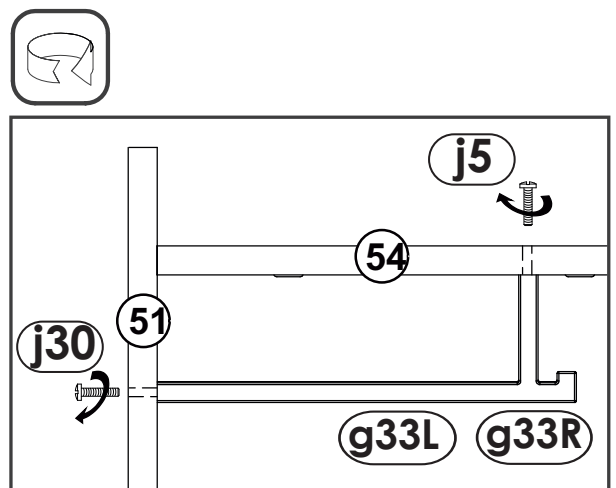
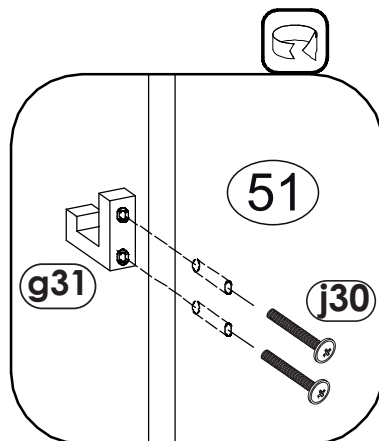


4

4

x2

 $\phi 8 \times 40$ mm **t14**

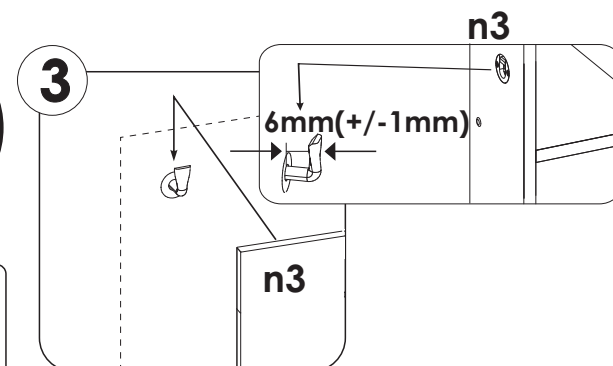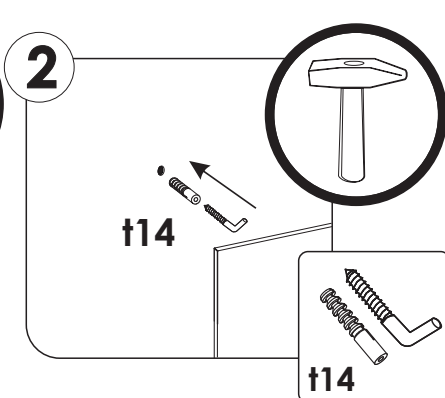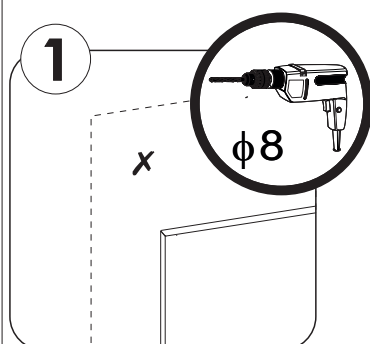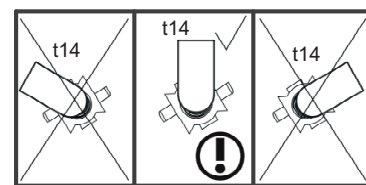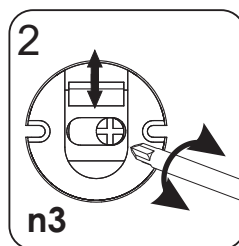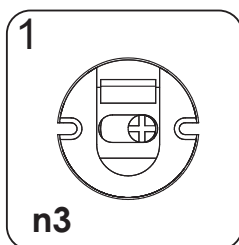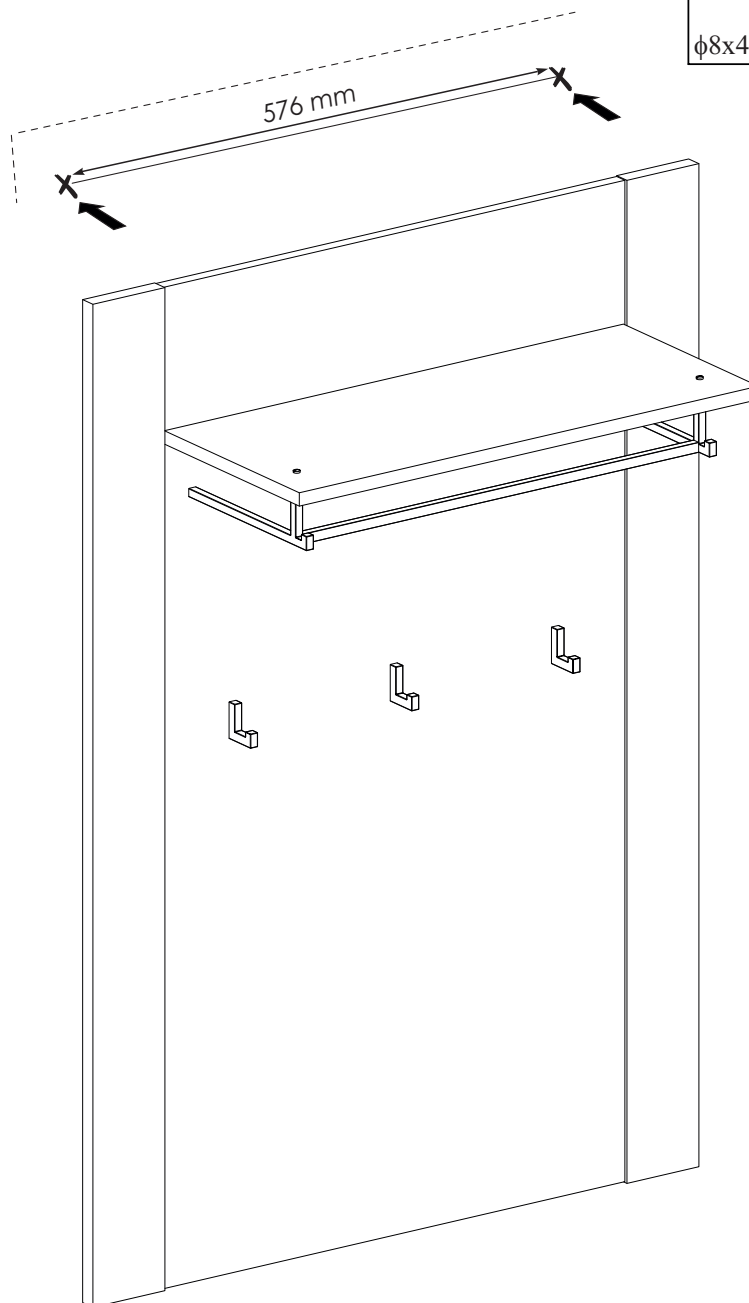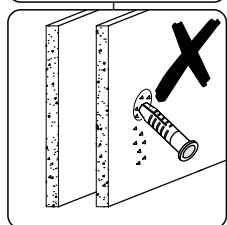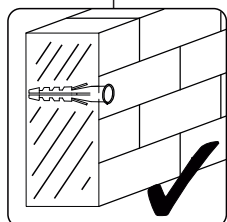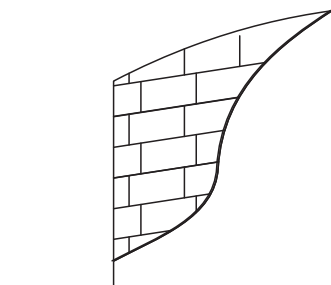

5