
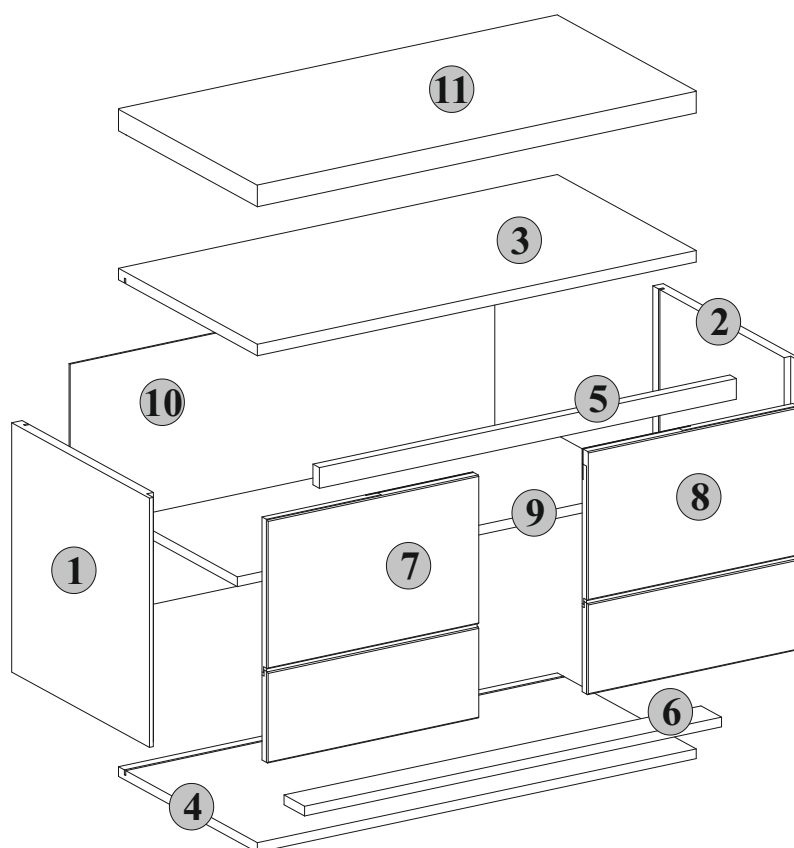
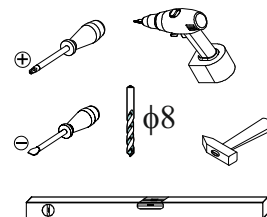
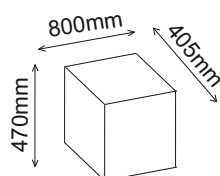
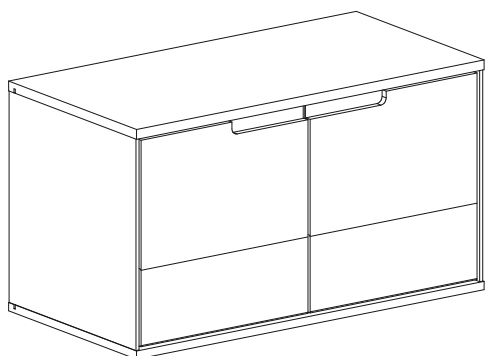




“3985”












versionsnummer: 05.12.2022

Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.













B1		B2		B3		B4
4x  φ5x17 mm d1	8x  φ3.5x16 mm p1	5x  k19	12x  l2	1x  φ5x17 mm t17	1x  n14	4x  b1
11x  s2	11x  φ15 #12.5 r1	10x  φ8x32 mm f1	10x  φ3.5x35 mm p80	2x  φ3.5x16 mm p1		4x  a2
10x  r16	1x  r14	1x  z1	2x  φ4x30 mm p42			

I

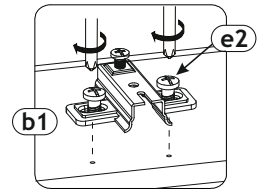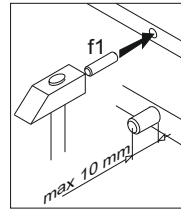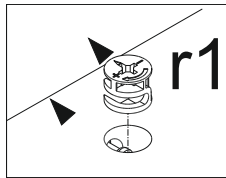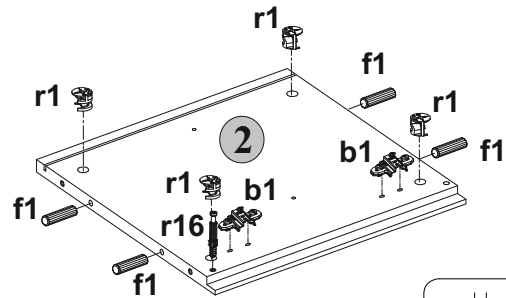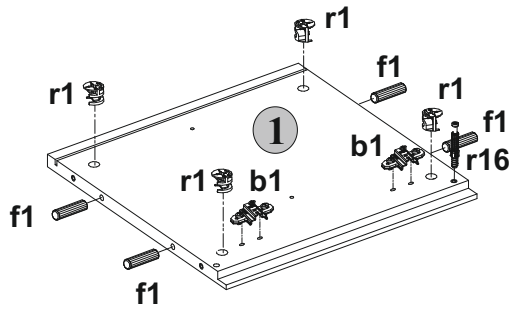
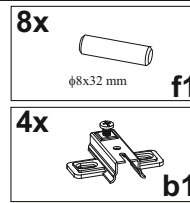
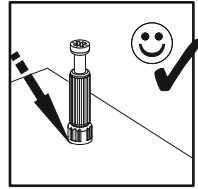
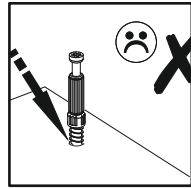
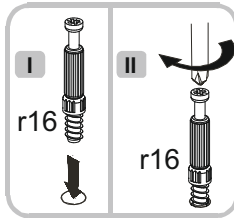


2

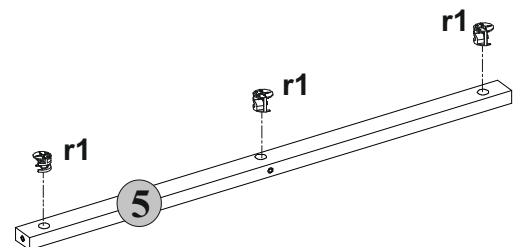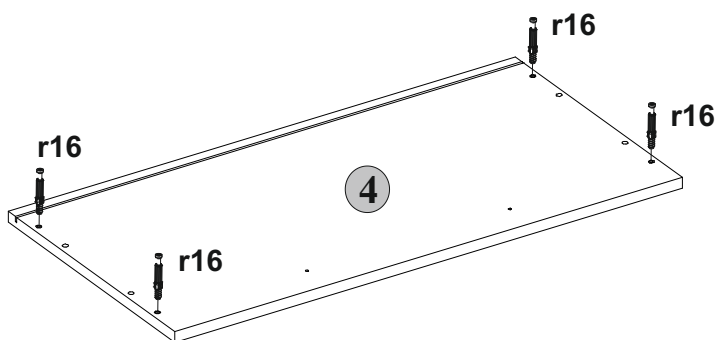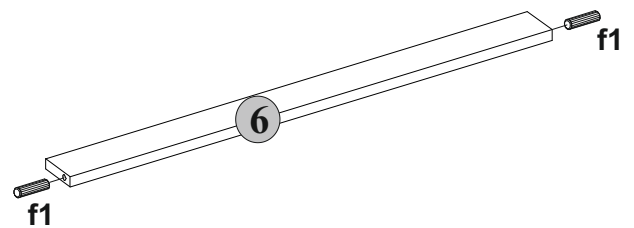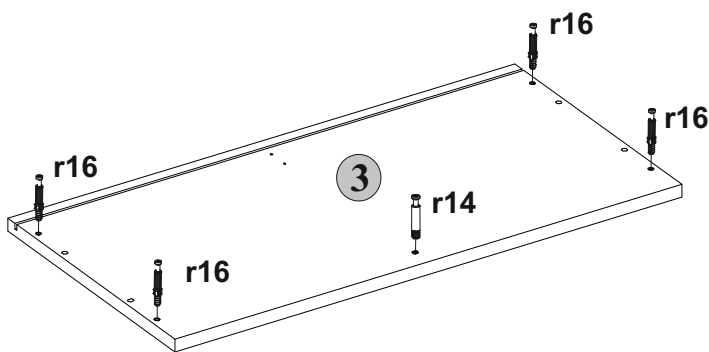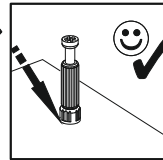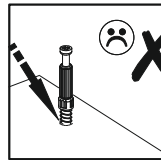
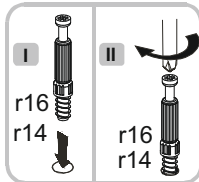


2

3

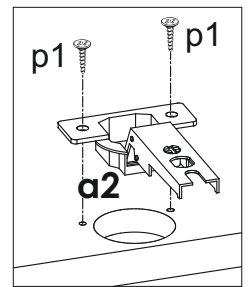
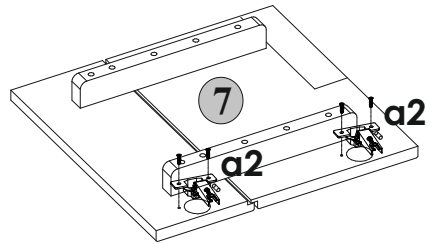
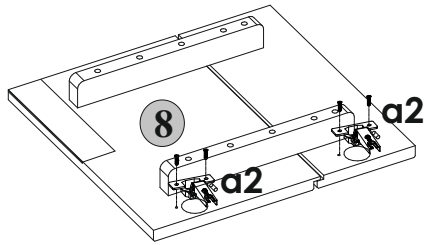




4

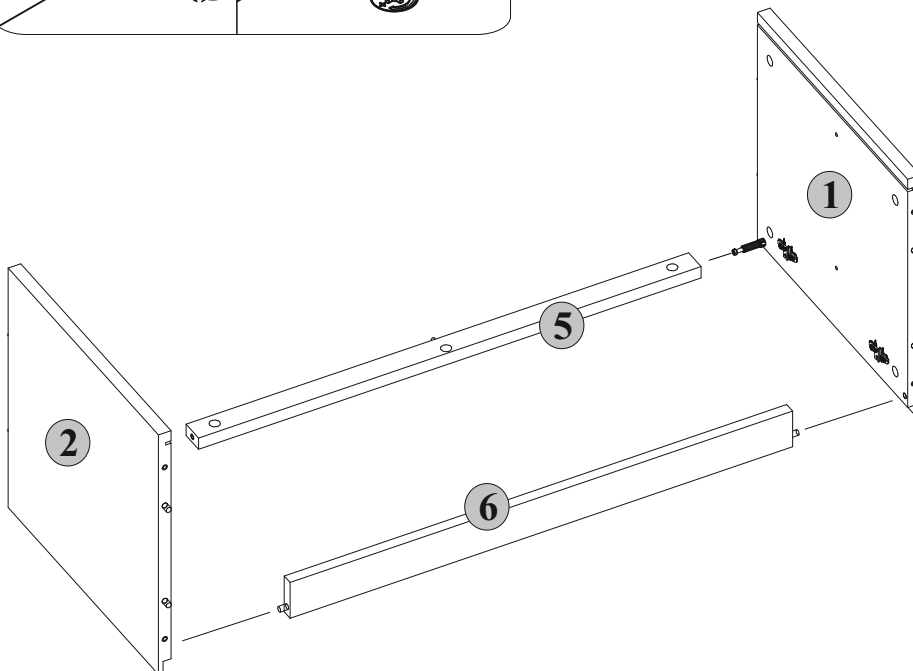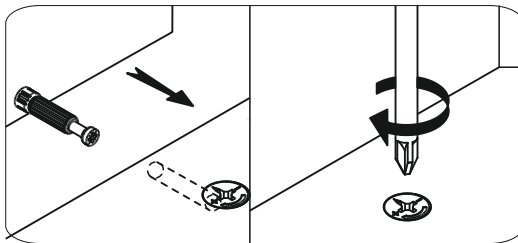

3





5

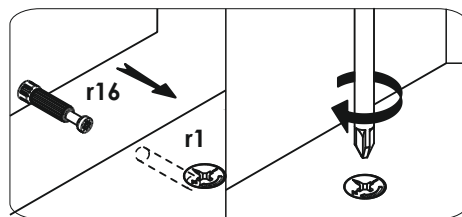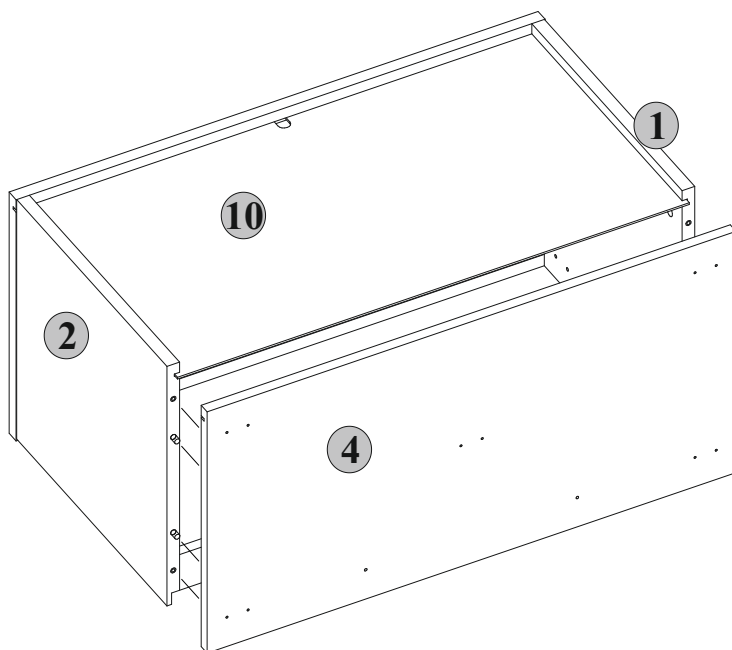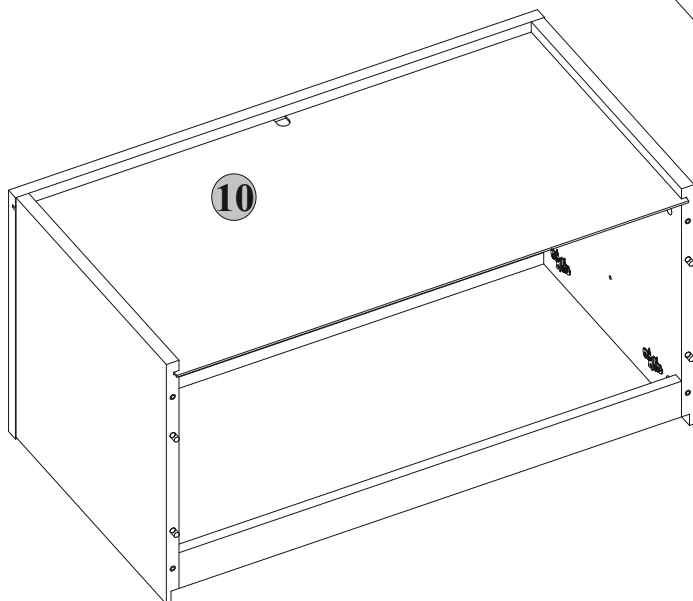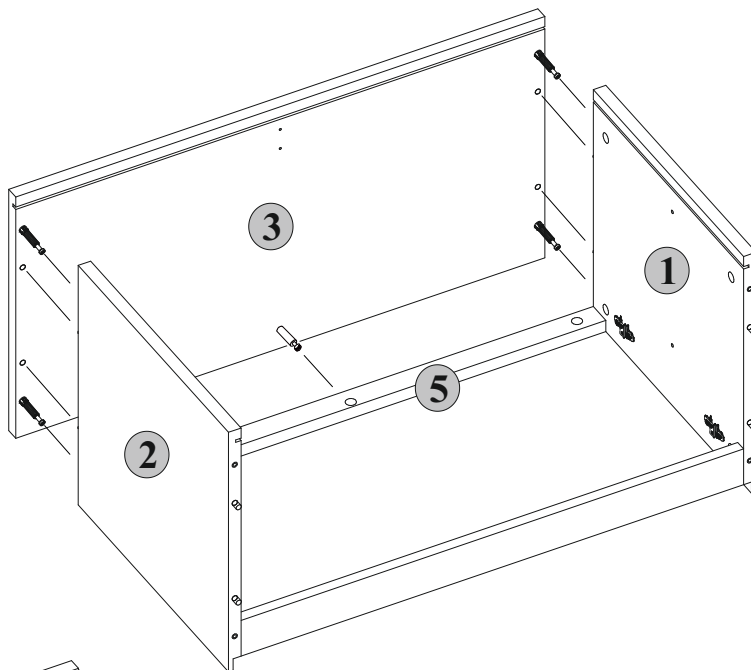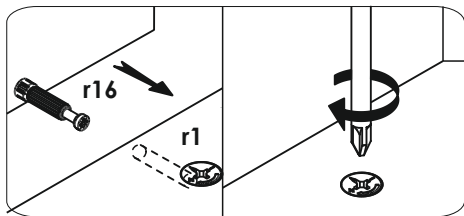

4

6

5x  k19	14x  l2
2x  φ4x30 mm p42	10x  φ3.5x35 mm p80

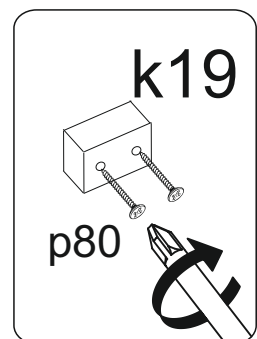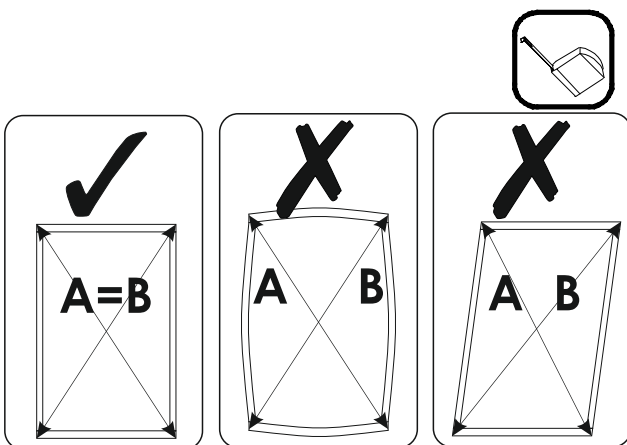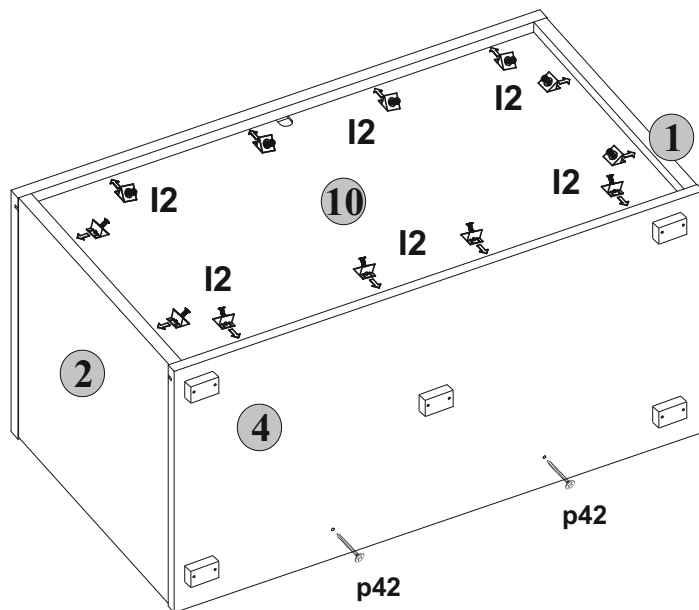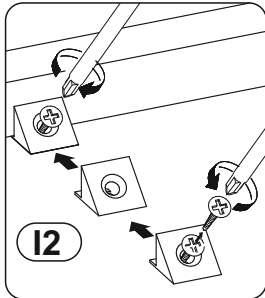

5

7




15x
s2

4x
d1
φ5x17 mm

1x
t17

1x
n14

2x
p1
φ3.5x16 mm

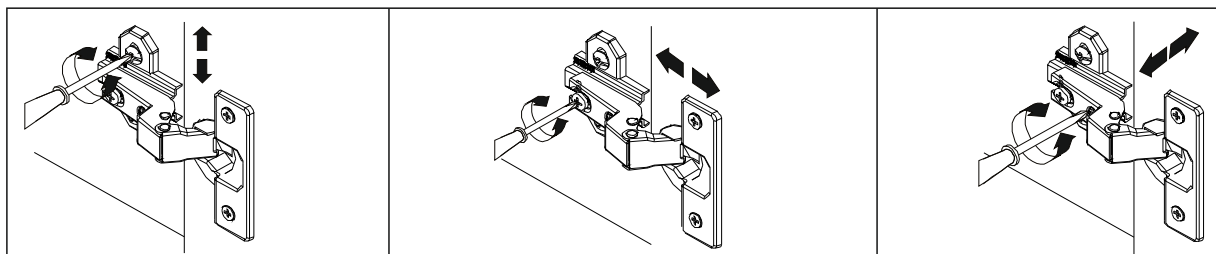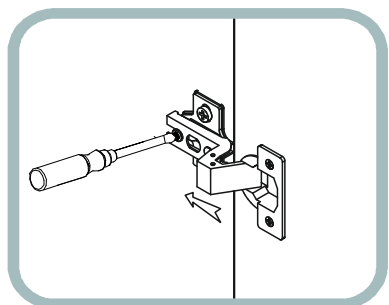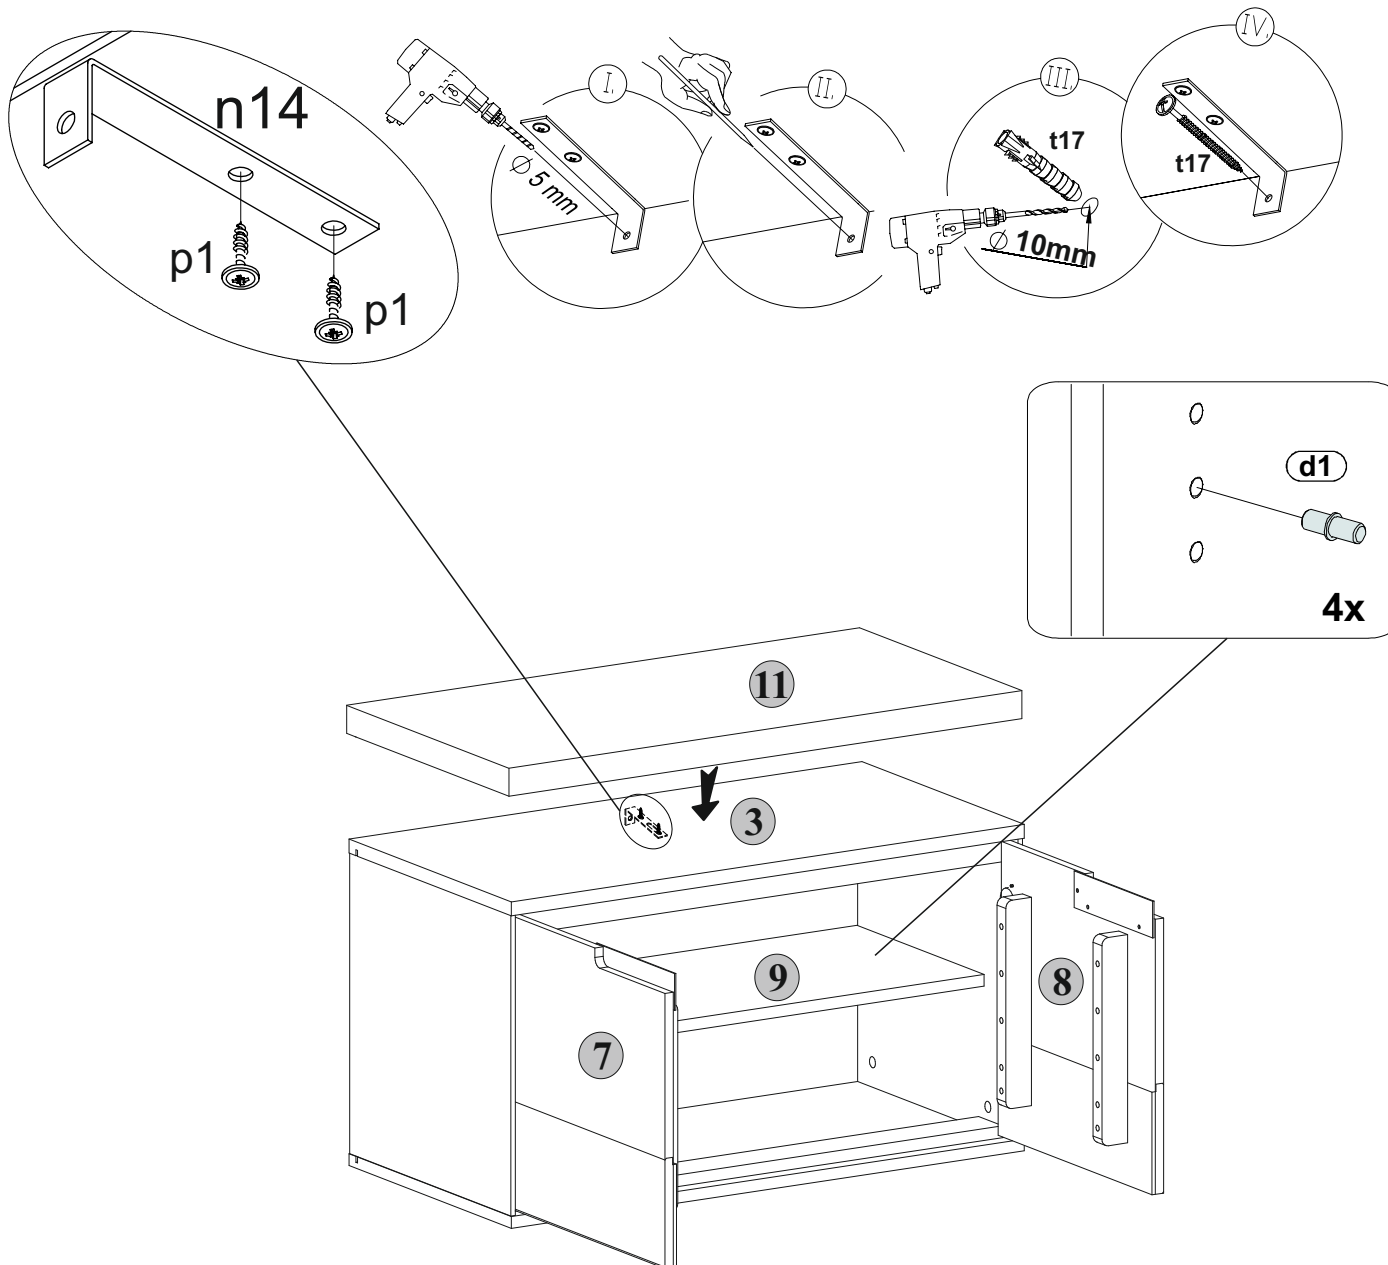

6